


CONSOLE TABLE

Stock number: 26X0-19

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

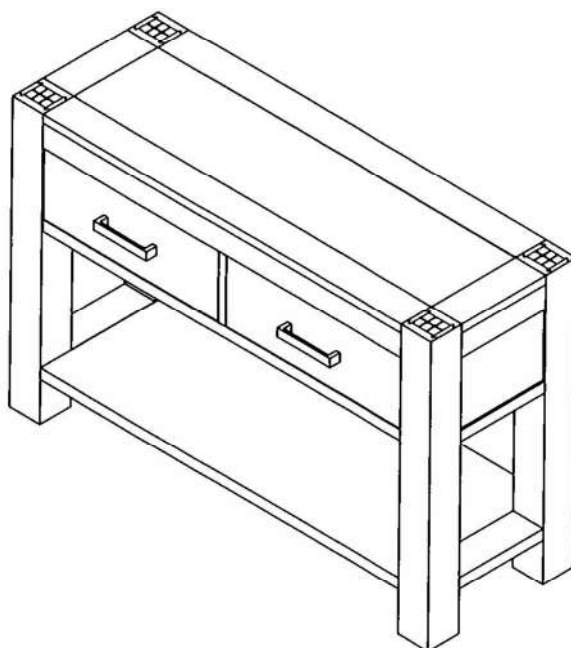


Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools : Pozi screwdriver and Phillips screwdriver



Pz 2 or Pz 3

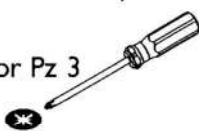

Ph 2



(Included)



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately **45 MINUTES** to assemble with **2 PEOPLE**.

All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

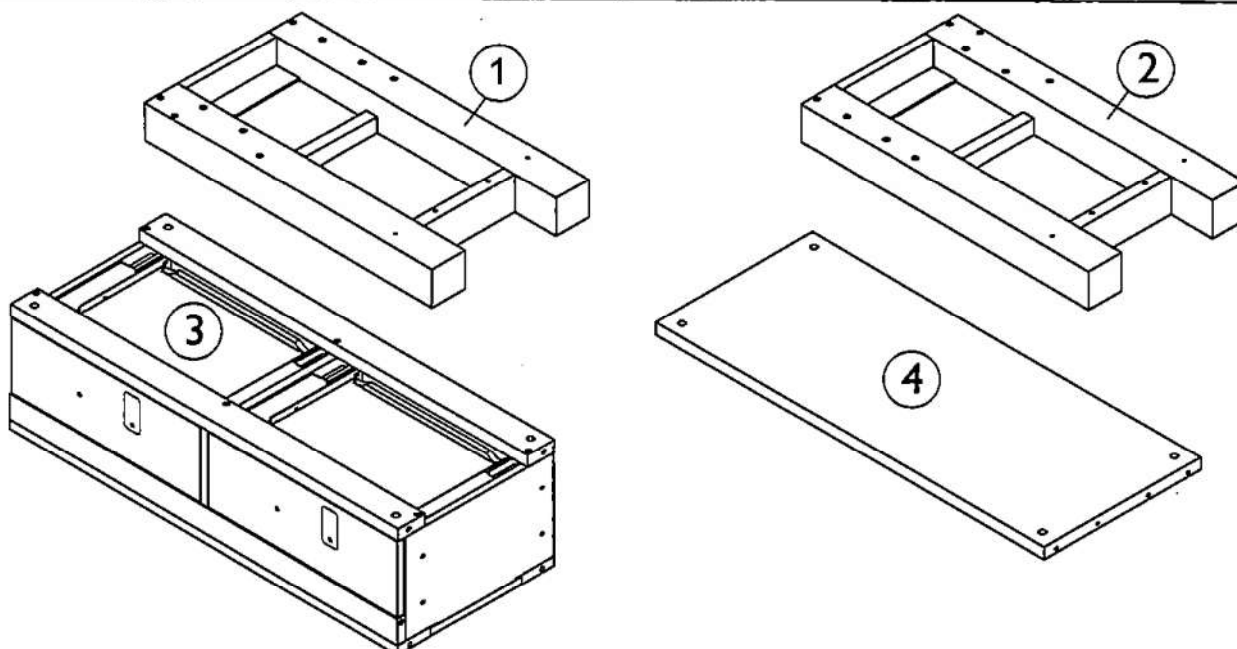

Fittings and parts checklist

Item	Description	Qty.	Item	Description	Qty.
1	Left leg frame	x 1	3	Top unit	x 1
2	Right leg frame	x 1	4	Fixed shelf	x 1
A	Grub screw Ø8 x 8.5mm	x10	F	Hex head bolt M6x35mm	x 8
B	Small steel dowel Ø7 x 49.5mm	x 6	G	Steel dowel Ø7 x 70mm	x 4
C	Cam screw Ø7 x 44.5mm	x 4	H	Allen key M4x30x107	x 1
D	Cam lock	x 4	J	Round head bolt M4x25mm	x 4
E	Wooden dowel Ø8x30mm	x 4	K	Handle (Option)	x 2

Step By Step Assembly Instructions

Step 1

- 1.1 : Lay all parts on a flat, stable, clean and soft surface.
- 1.2 : Attach 6x small steel dowels (B) and 4x steel dowels (G) to leg frames (1) & (2) by screwing fittings (B) & (G) into the inset fittings that are located on leg frames (1) and (2) as shown. Use a pozi screwdriver to turn fittings (B) & (G) clockwise to fix. Ensure the direction of the holes on fittings (B) & (G) are facing correctly as per diagram.
- 1.3 : Attach 4x cam screws (C) into the pre-drilled holes on leg frames (1) & (2) as shown. Use a pozi screwdriver to turn fittings (C) clockwise to fix.


Fitting




B x 6



C x 4

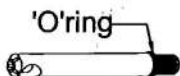

G x 4

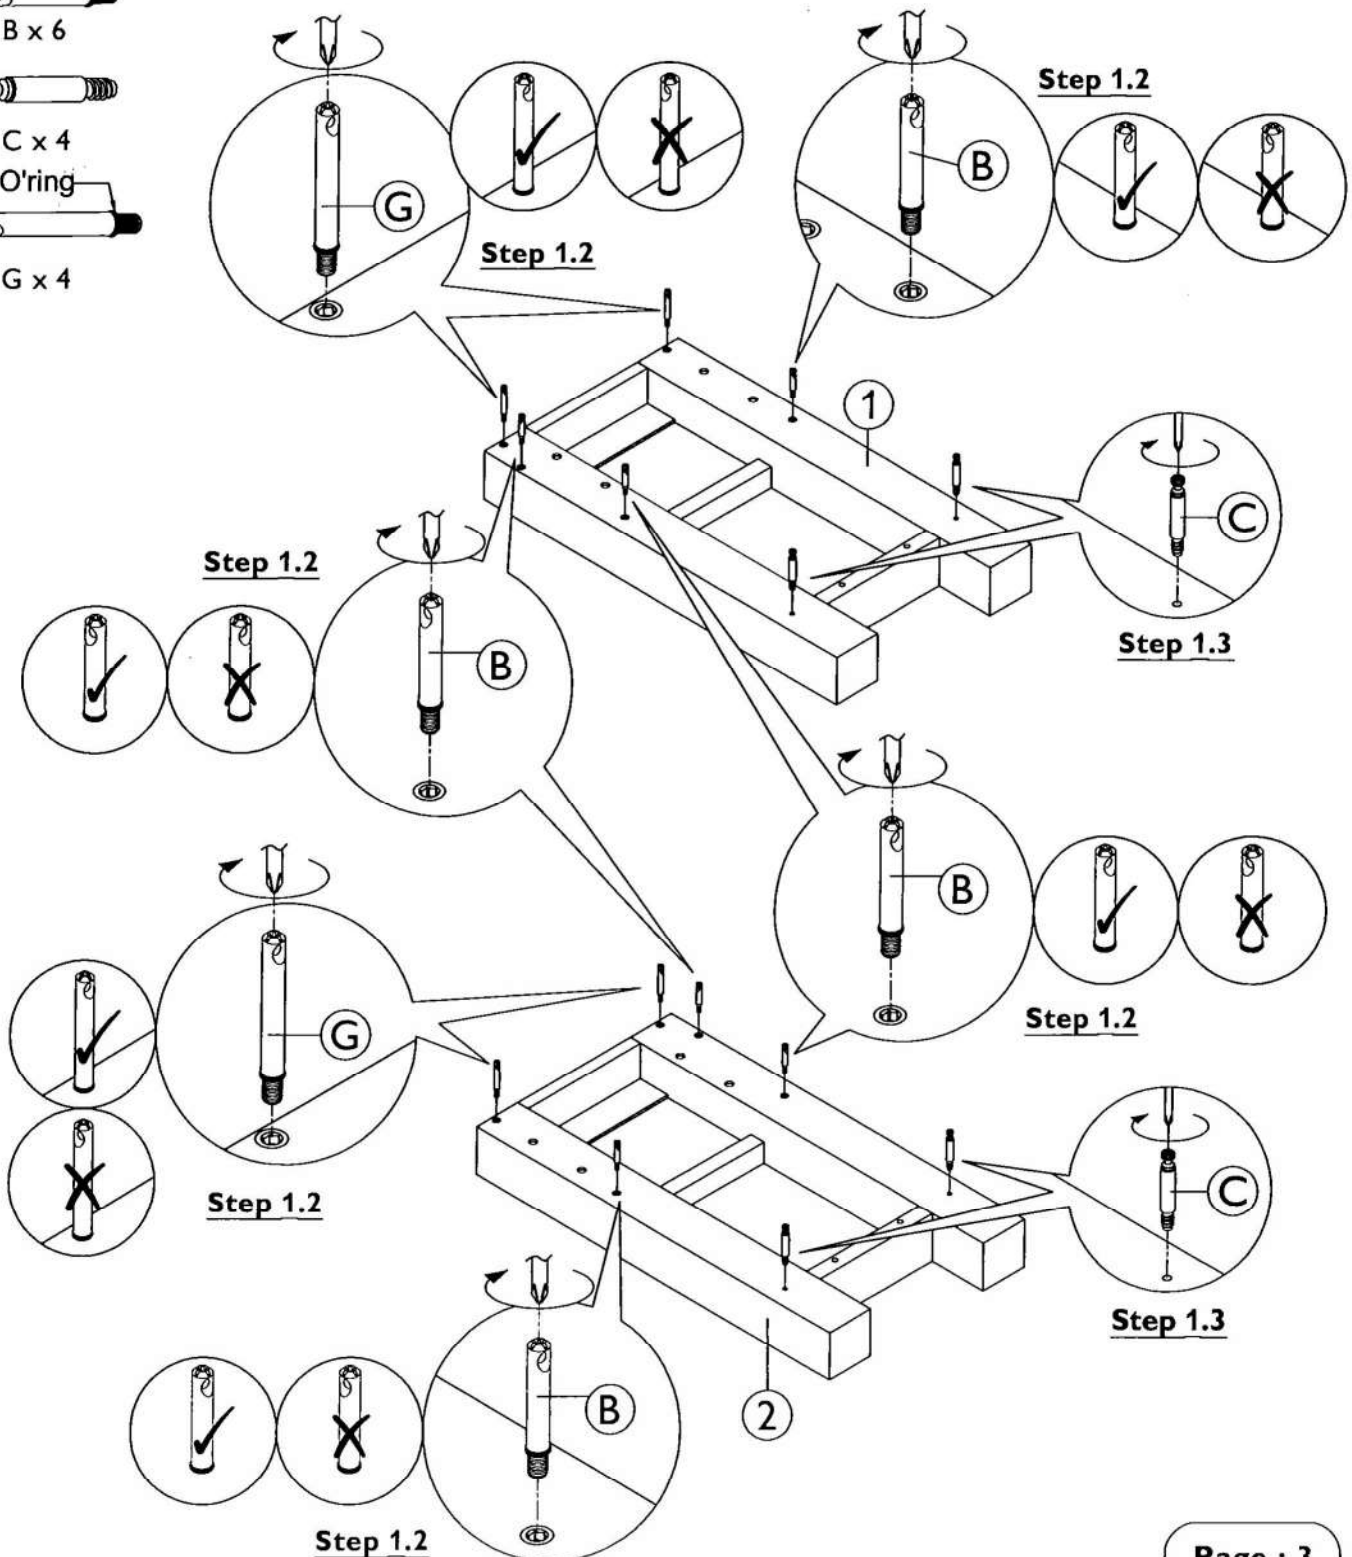


Step By Step Assembly Instructions

Step 2 : Insert 4x wooden dowels (E) into the pre-drilled holes on fixed shelf (4) as shown.

Fitting





E x 4

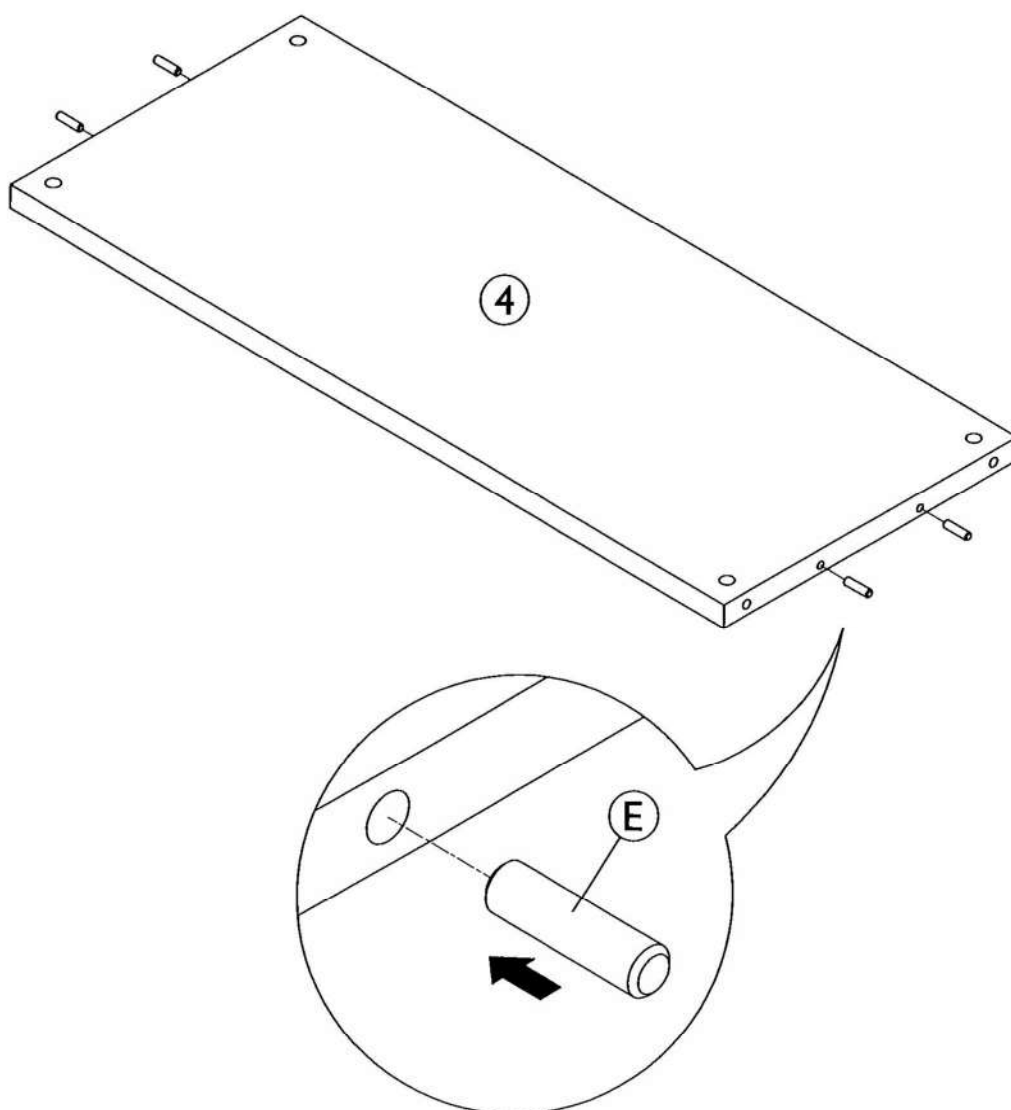


TANDEM RUNNER ADJUSTMENT INSTRUCTION

REMOVE

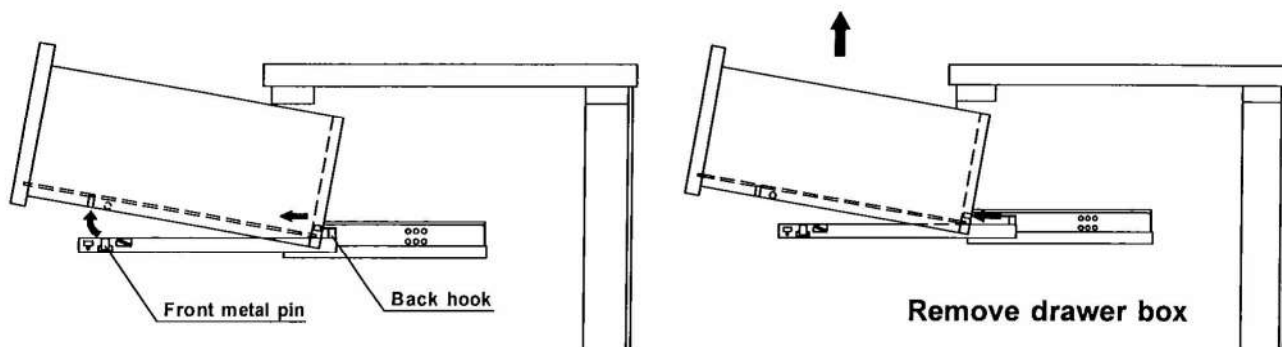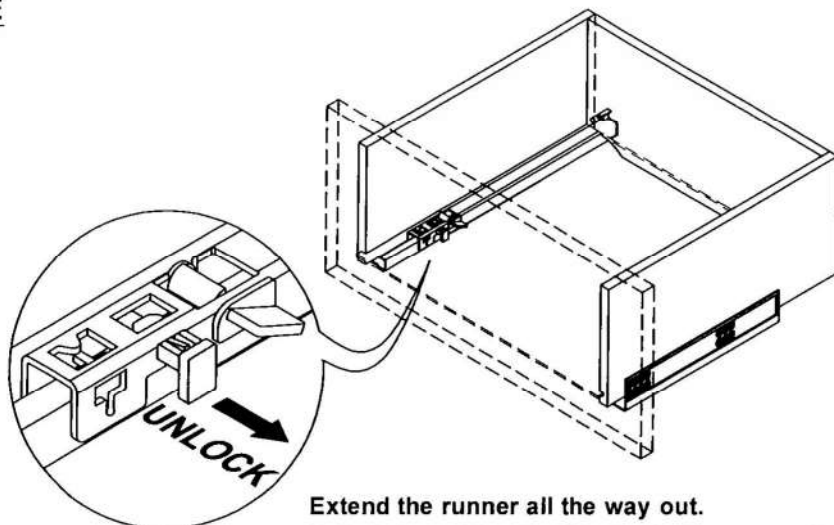

Hold runners with both of your hands.
Carefully lift the drawer front up from the front metal pin, then slide forward to remove from back hooks.

VERTICAL ADJUSTMENT (± 2.5 mm)

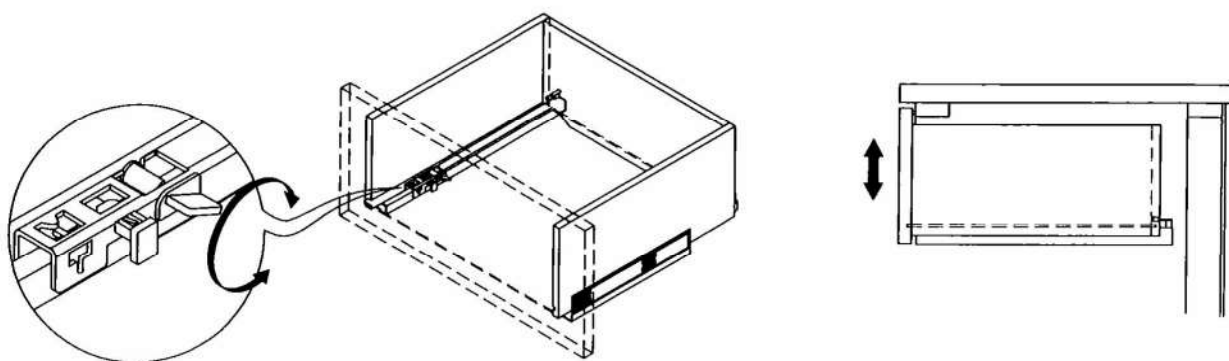


Step By Step Assembly Instructions

- Step 3**
- 3.1 : Attach left leg frame (1) to top unit (3) as shown. Ensure steel dowels (B) & (G) are aligned correctly with the holes of mating parts before attaching.
- 3.2 : Secure left leg frame (1) to top unit (3) using 5x grub screws (A) as shown. Use a pozi screwdriver to turn fittings (A) clockwise to fix.

Fitting



A x 5

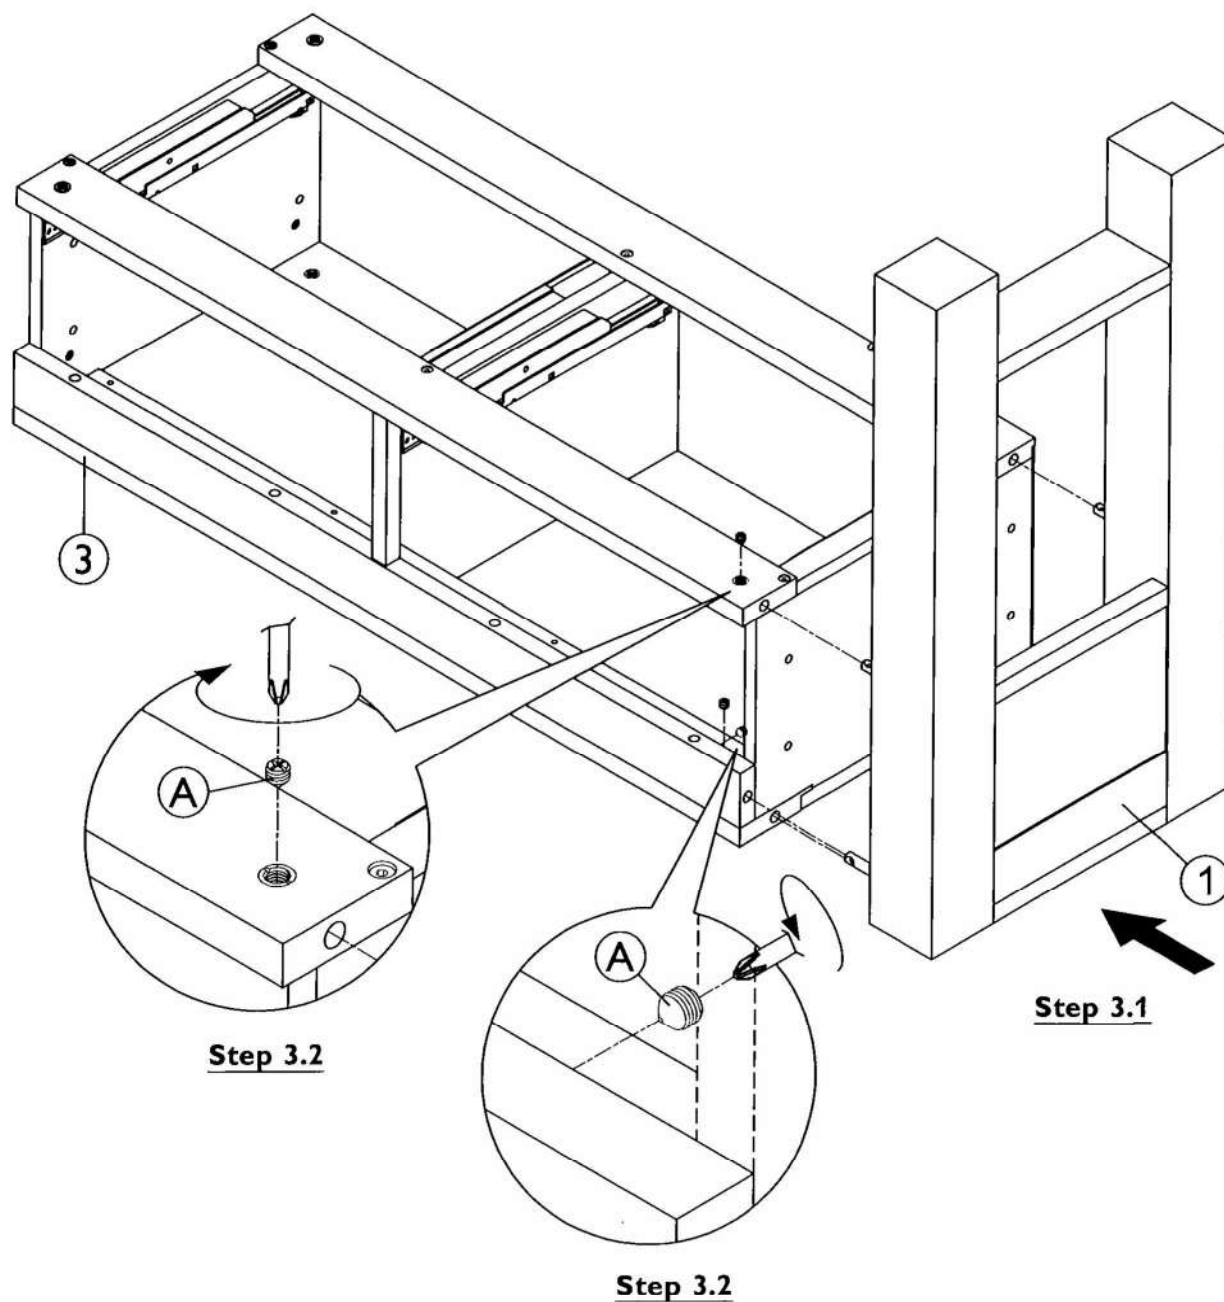

Step By Step Assembly Instructions

Step

4


Fitting



D x 2

4.1 : With help of assistant, attach fixed shelf (4) to the structure assembled in **Step 3** as shown. Ensure cam screws (C) and wooden dowels (E) are aligned correctly with the holes of mating parts before attaching.

4.2 : Secure part (4) to left leg frame (1) using 2x cam locks (D) as shown. Use a pozi screwdriver to turn fittings (D) clockwise to fix.

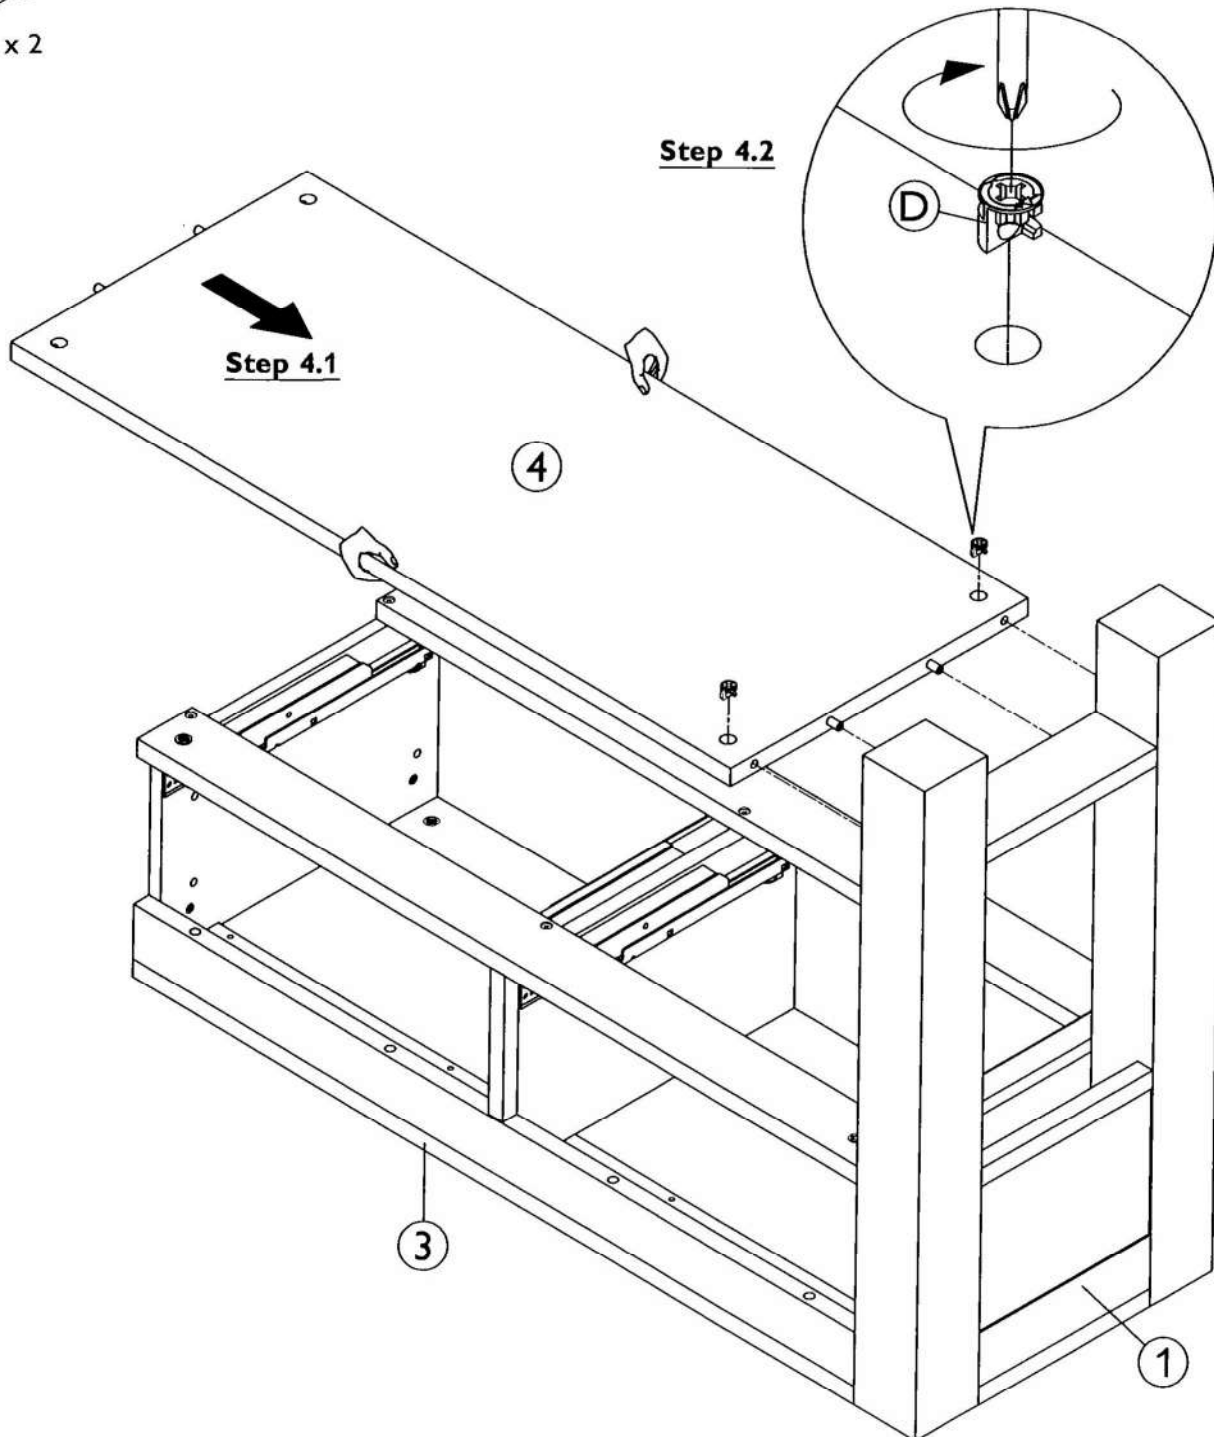

Step By Step Assembly Instructions

- Step 5** 5.1 : Attach right leg frame (2) to the structure assembled in **Step 4** as shown. Ensure steel dowels (B) & (G), cam screws (C) and wooden dowels (E) are aligned correctly with the holes of mating parts before attaching.
- 5.2 : Secure right leg frame (2) to top unit (3) using 5x grub screws (A) & to fixed shelf (4) using 2x cam locks (D) as shown. Use a pozi screwdriver to turn fittings (D) & (A) clockwise to fix.


Fitting



A x 5



D x 2

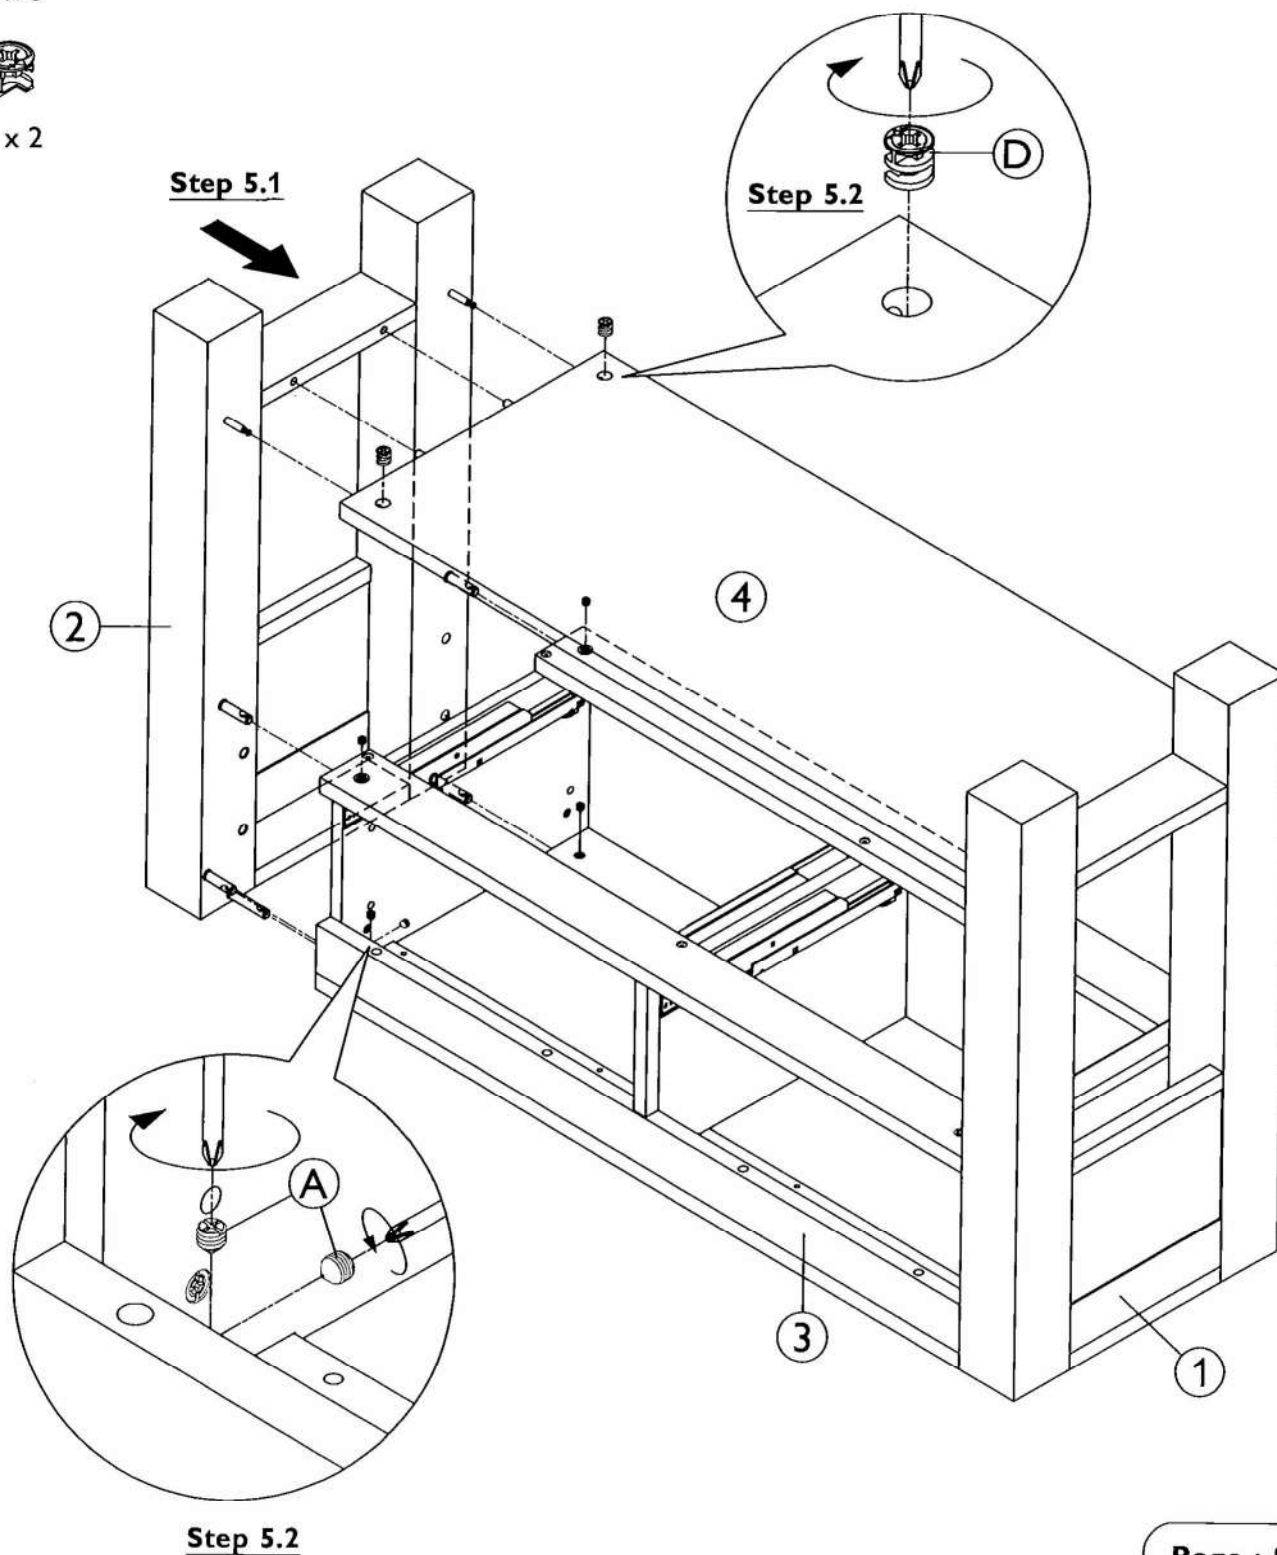

Step By Step Assembly Instructions

Step

6

With help of assistant :

6.1: Secure leg frames (1) & (2) to top unit (3) using 8x hex head bolts (F) as shown.

Use allen key (H) to turn fittings (F) clockwise to fix.

6.2: Stand the unit upright.


Fitting



F x 8






H x 1

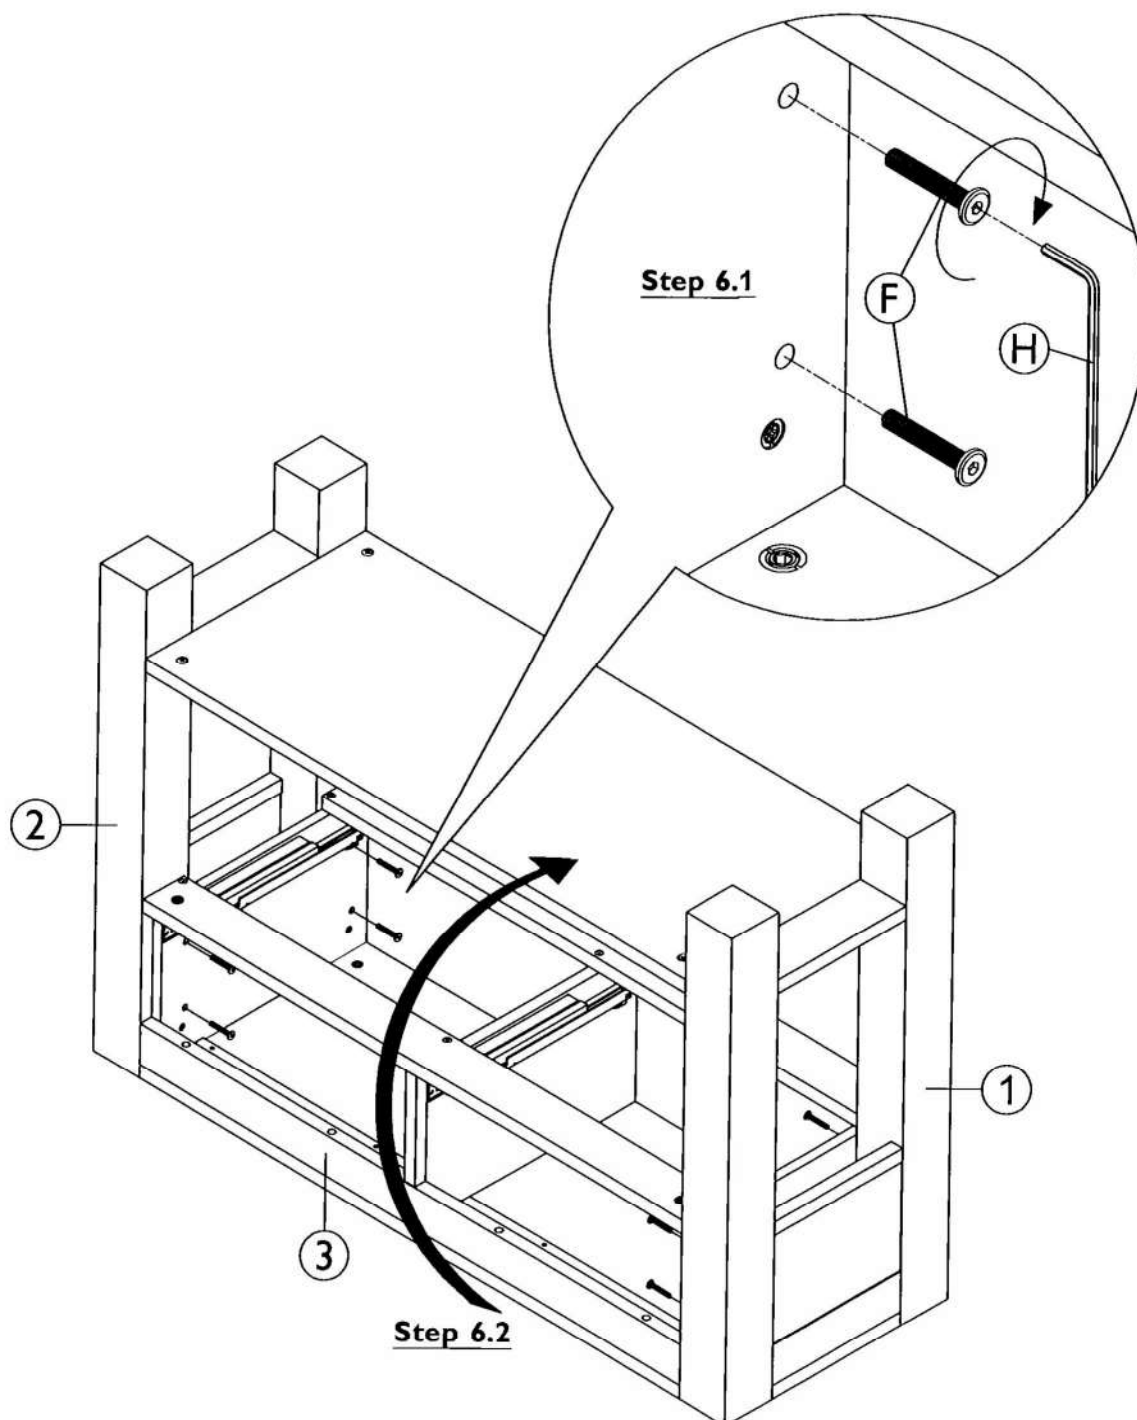

TANDEM RUNNER ADJUSTMENT INSTRUCTION

ASSEMBLE

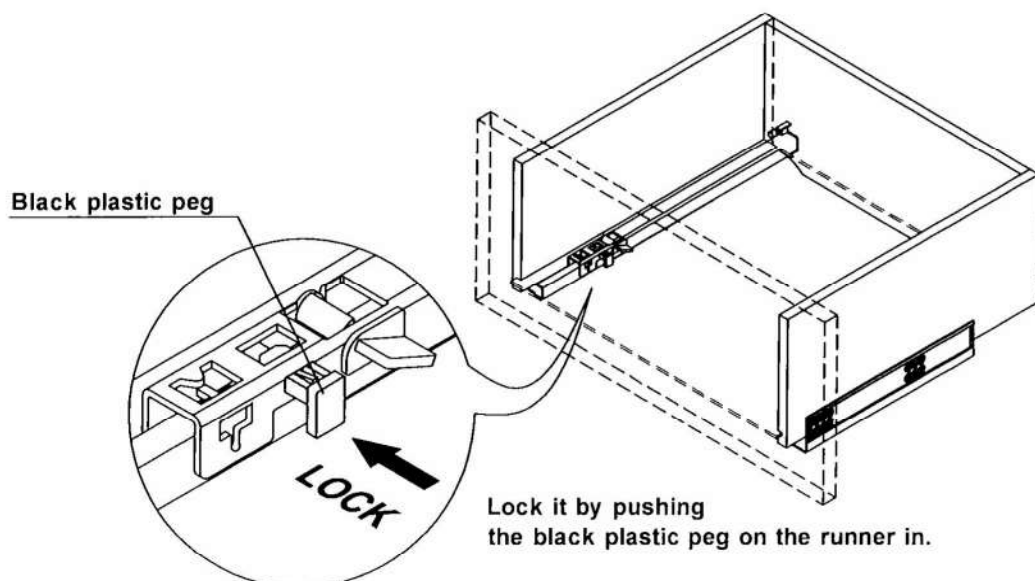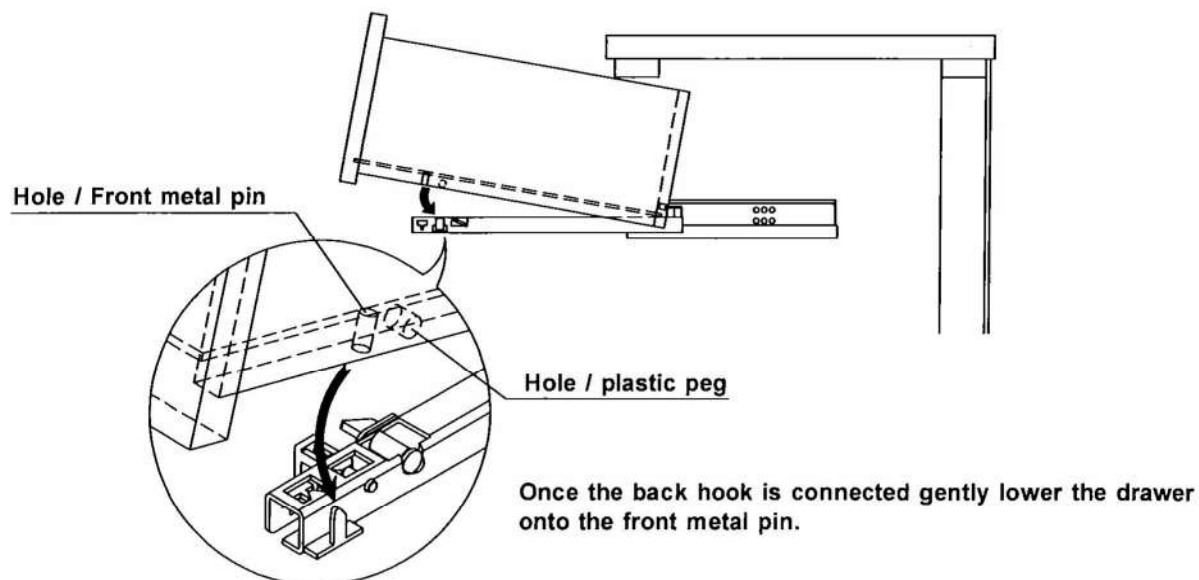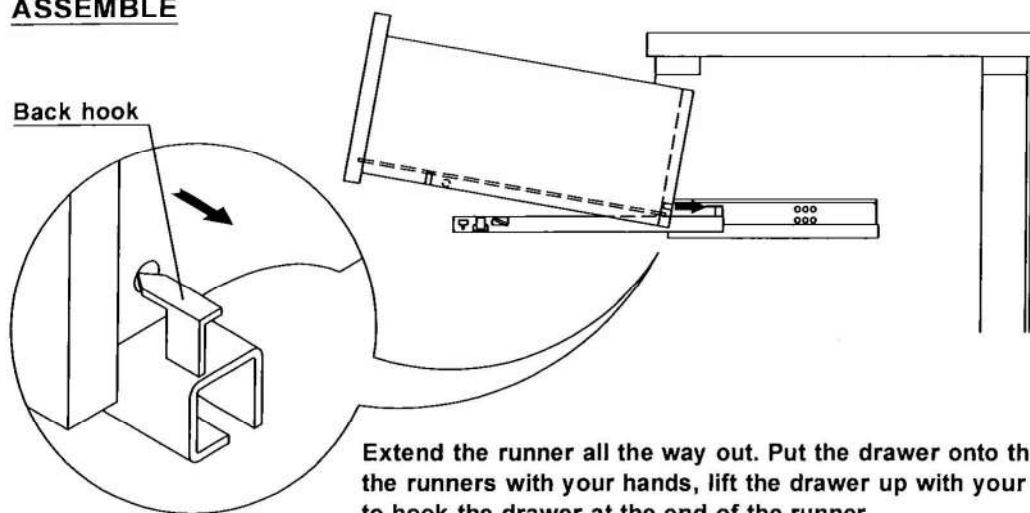

Step By Step Assembly Instructions



Step 7

7.1 : Pull out the drawers as shown.


7.2 : Remove the handles from drawer fronts by using a screwdriver to turn round head bolts counterclockwise as shown.

7.3 : Attach a handles to the front of the drawers using round head bolts as shown.
Use a screwdriver to turn fittings clockwise to fix.


Step 7.1 & 7.2

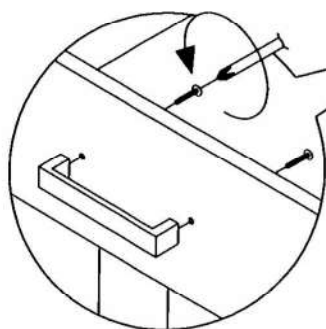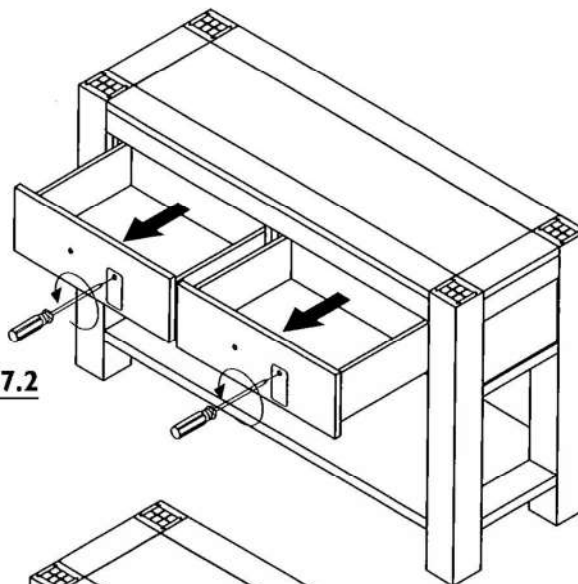

Step 7.3

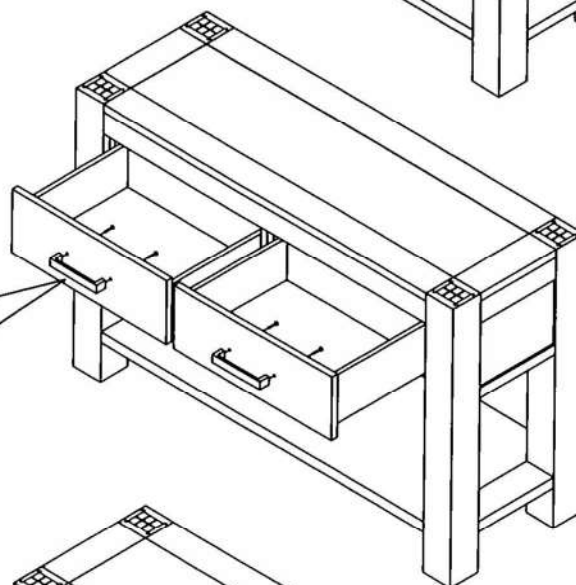

Assembly is complete

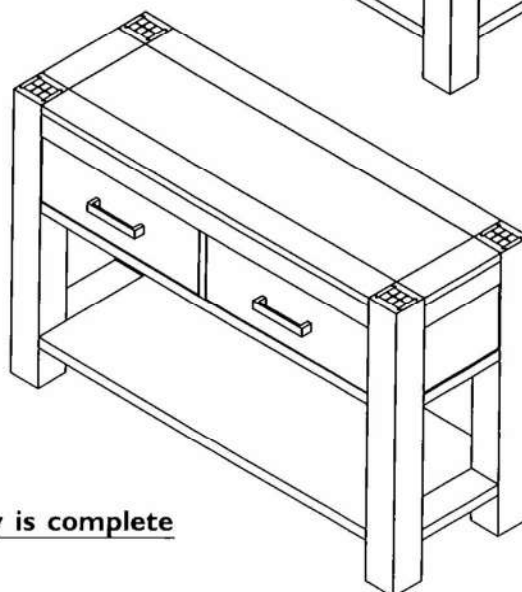

Step By Step Assembly Instructions

Handle option:

Attach 2x handles (K) to the front of the drawers using 4x round head bolts (J) as shown. Use a screwdriver to turn fittings (J) clockwise to fix.


Fitting



K x 2



J x 4

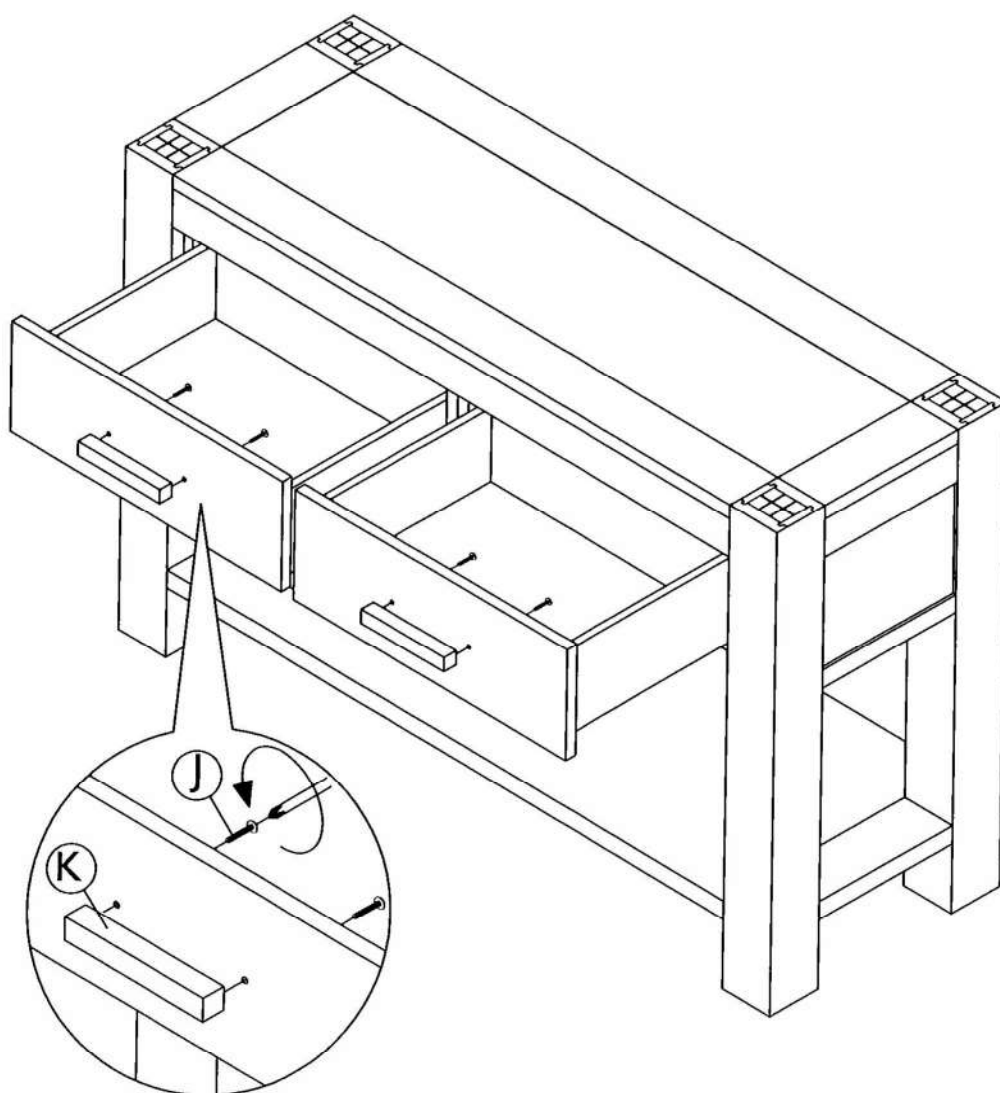

Care and Maintenance

Wood Furniture

Wood displays different grain patterns depending on which way they are cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood.

Some furniture is also deliberately aged and rustic.

Wood veneers also allow distinctive patterns to be created on some surfaces, such as table tops and drawer fronts by the way slivers are arranged.

All timber and veneer surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Dust with a clean, damp, lint free cloth. Frequent dusting will remove abrasive build up, which can damage the finish over time.

Do not use a very wet cloth or allow any liquid to contact with the veneers for a long period of time as this can permanently damage the surface. Wipe up spills immediately.

Do not use any abrasive cleaner or harsh detergent as this can damage the surface of the furniture.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface when building up over time.

Make sure all surfaces are protected from heat and liquids by mats and coasters.

Ensure that a mat or pad is placed under paper when you are writing on the furniture surface.

Do not place rubber, cork, vinyl or plastic materials on the wood finish as chemicals within may react with the finish if left in contact for an extended period of time.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by home heating can cause damage such as warping, cracking or splitting.

Excessive exposure to sunlight can cause fading of your furniture.

Avoid exposing your furniture to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth in the direction of the wood grain. If sticky liquid residues do occur, they may be removed with a dilute solution of warm soapy water followed by a clean, damp sponge. The area should then be wiped immediately in the direction of the wood grain with a clean, soft white cloth until completely dry.

Nail polish remover, hairspray, perfume, potpourri & any other products that contains solvents can damage wood upholstery finishes.

Safety Instructions:

Never drag furniture when moving it. Always lift it.

Periodically check all fixings to ensure none have come loose. Re-tighten when necessary.

Please take care when handling or moving the furniture as careless handling may cause damage or injury.

Furniture can be dangerous if incorrectly assembled. Assembly should be carried out by a competent person.

No liability will be accepted for damage or injury caused by incorrectly installed or assembled furniture.

Heavy item warning:

It is recommended to seek assistance when moving a heavy object. Take care when lifting to avoid personal injury and (or) damage to the product.

It is recommended that before moving a heavy object to a new location it is completely dis-assembled to avoid personal injury or damage to the furniture. Please be careful to retain all fittings when doing this.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

ECR# 12102

02/12/17

Alina ck
04/12/17

08 DEC 2017