 


DRESSING TABLE

Stock number: 2807-90

Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

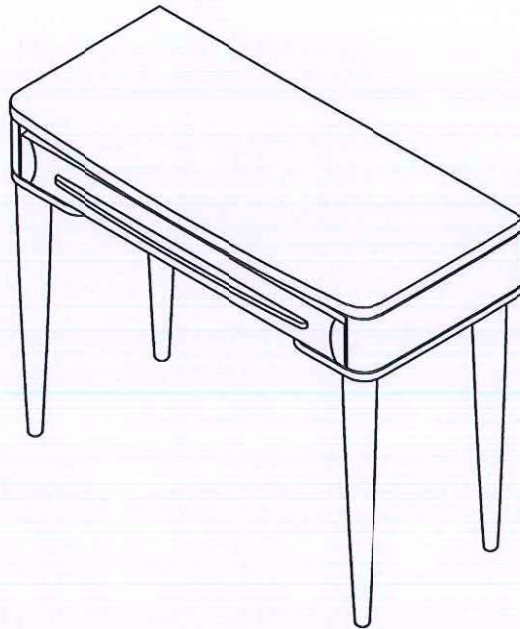

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools : Phillips screwdriver



Ph 2



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

 
This product takes approximately **10 MINUTES** to assemble with **2 PERSON**.

All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

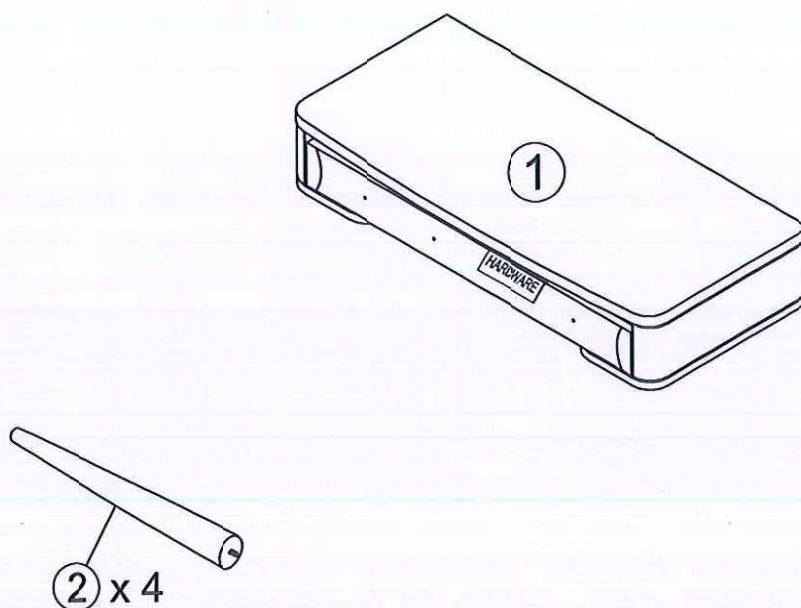

Fittings and parts checklist

Item	Description	Qty.	Item	Description	Qty.
1	Dressing table frame	x 1	2	Leg	x 4
A	Handle 	x 1	B	Metric Bolt M4x30mm 	x 4

Step by step assembly instructions

 
Step ①

1.1 : Lay all parts on a flat, stable, clean and soft surface.

1.2 : Screw each leg (2) into the fitting that is concealed in the pre-drilled hole on dressing table frame (1) as shown. Continue to re-tighten until it is securely fastened.

Repeat above procedure for the remaining legs (2).

1.3 : Stand the unit upright.

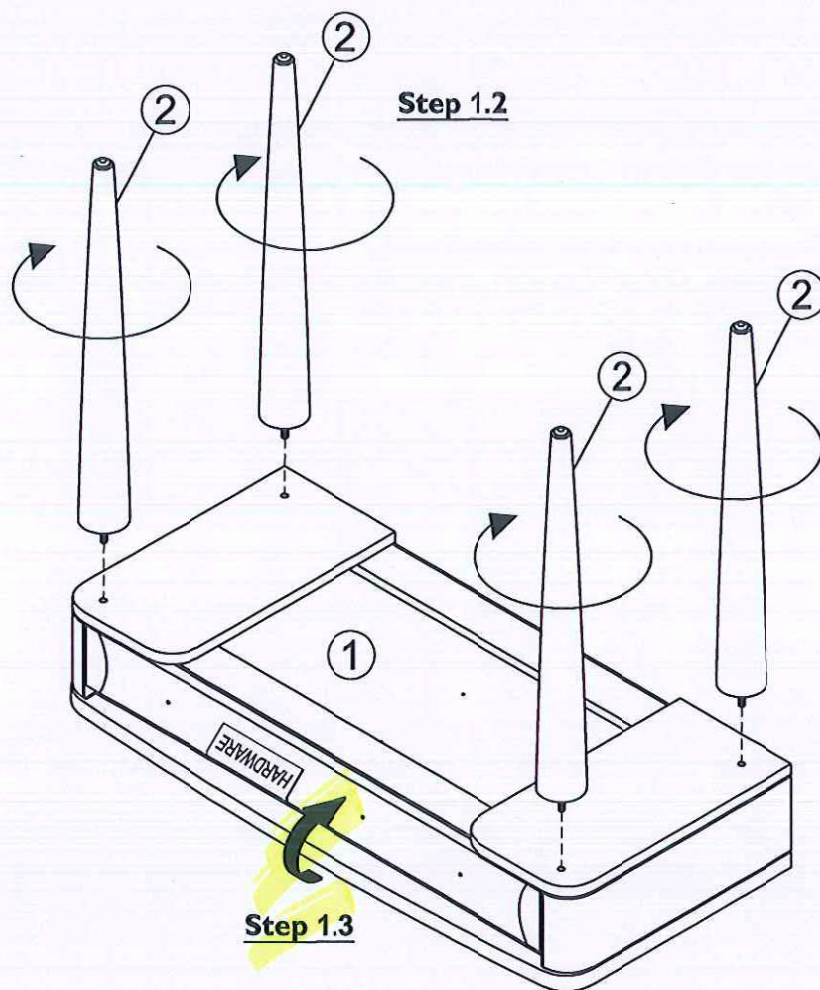


Step by step assembly instructions

Step ②



2.1 : Pull out the drawer using the hardware box as shown.

2.2 : Attach a handle to drawer front using round head bolts as shown. Use a screwdriver to turn fittings clockwise to fix.

 Step 2.1

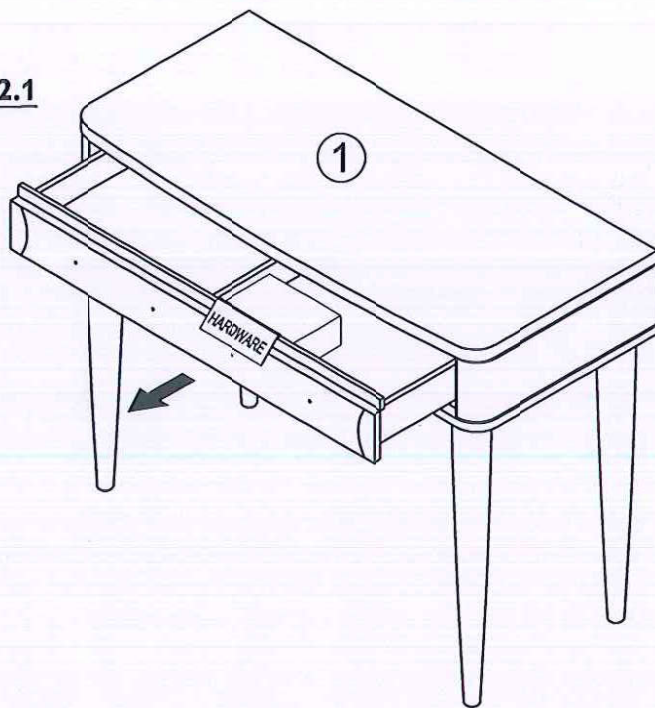

 
 
Step 2.2

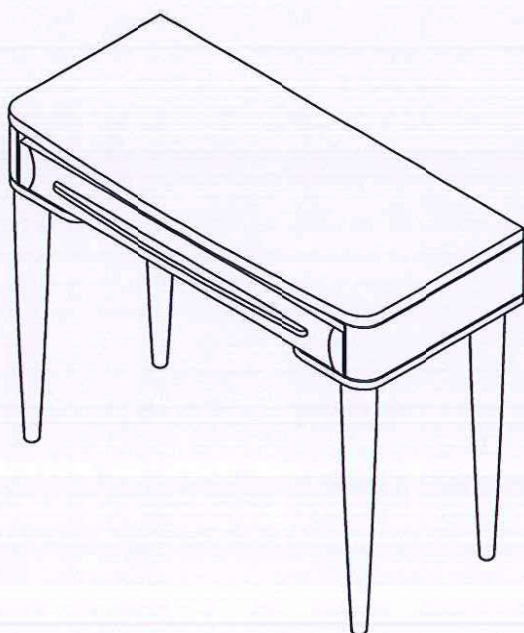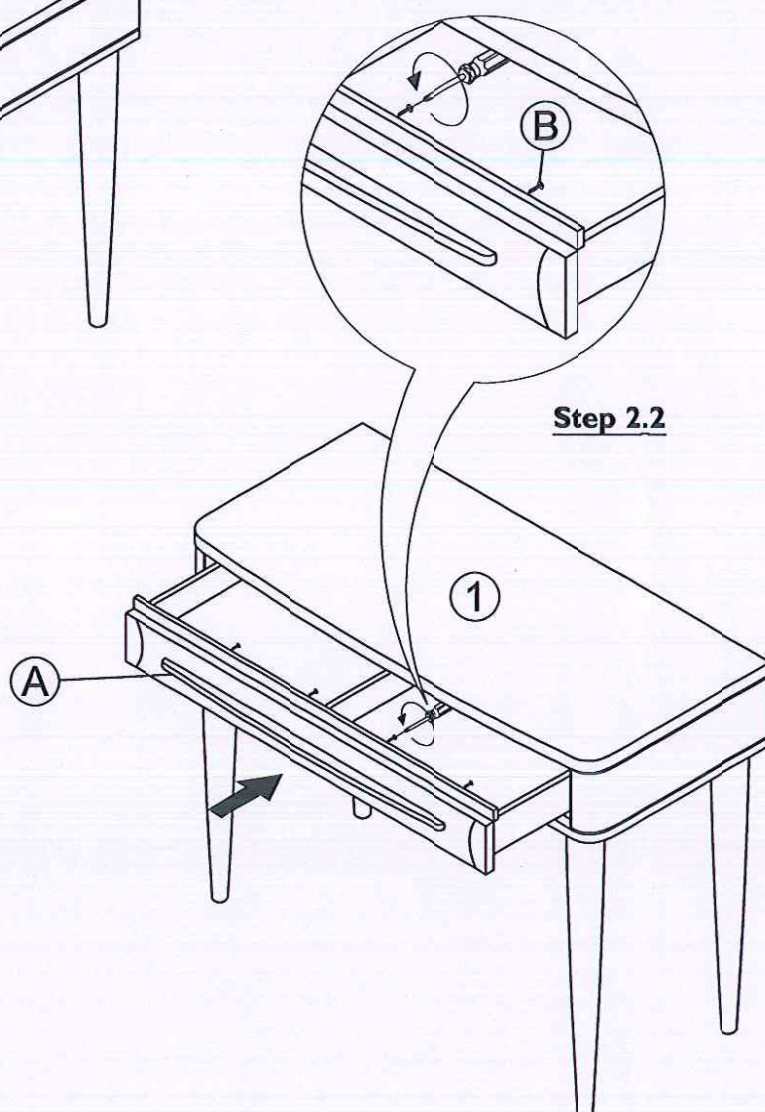

Assembly is complete


TANDEM RUNNER ADJUSTMENT INSTRUCTION

  REMOVE

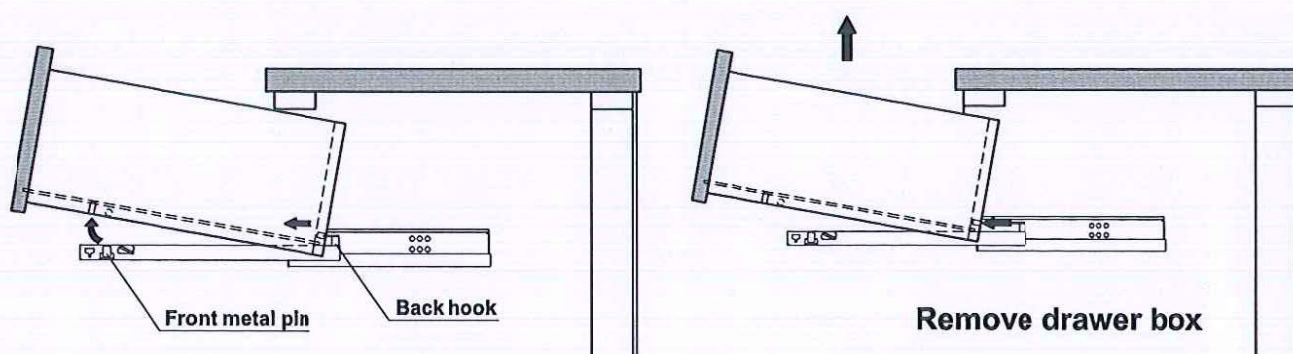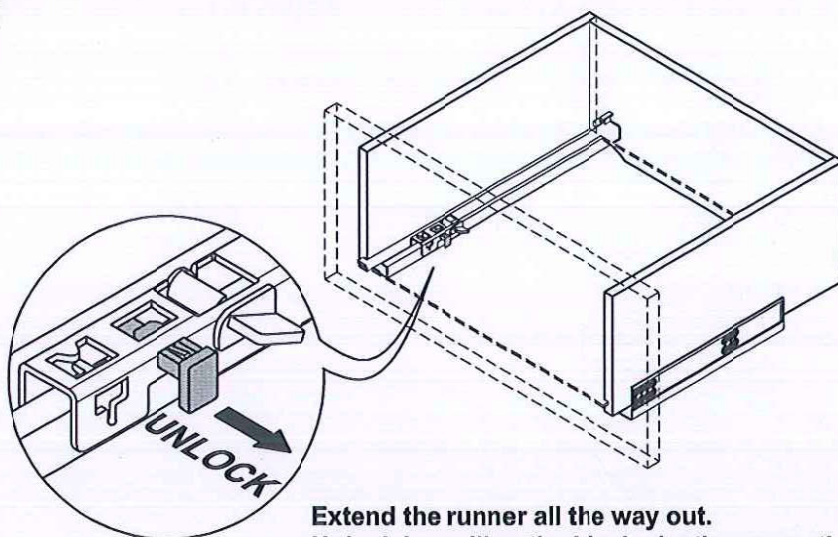




Hold runners with both of your hands.
Carefully lift the drawer front up from the front metal pin, then slide forward to remove from back hooks.

 VERTICAL ADJUSTMENT (± 2.5 mm)

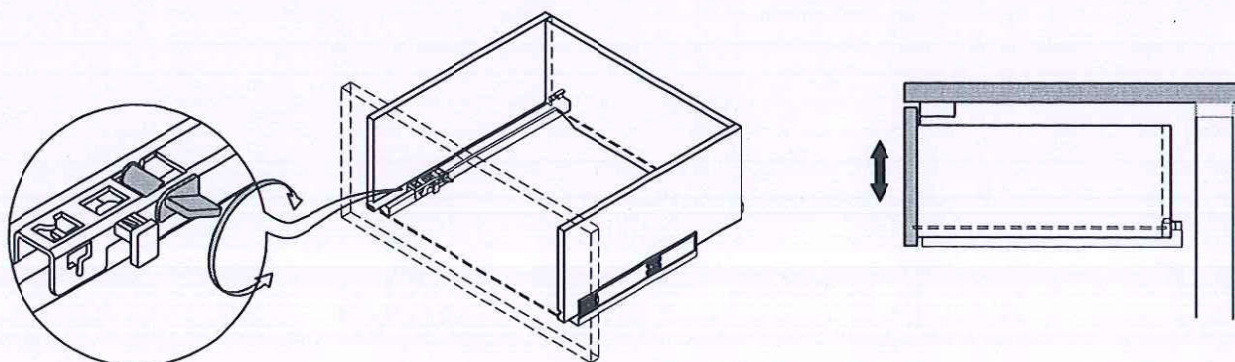


TANDEM RUNNER ADJUSTMENT INSTRUCTION

   ASSEMBLE

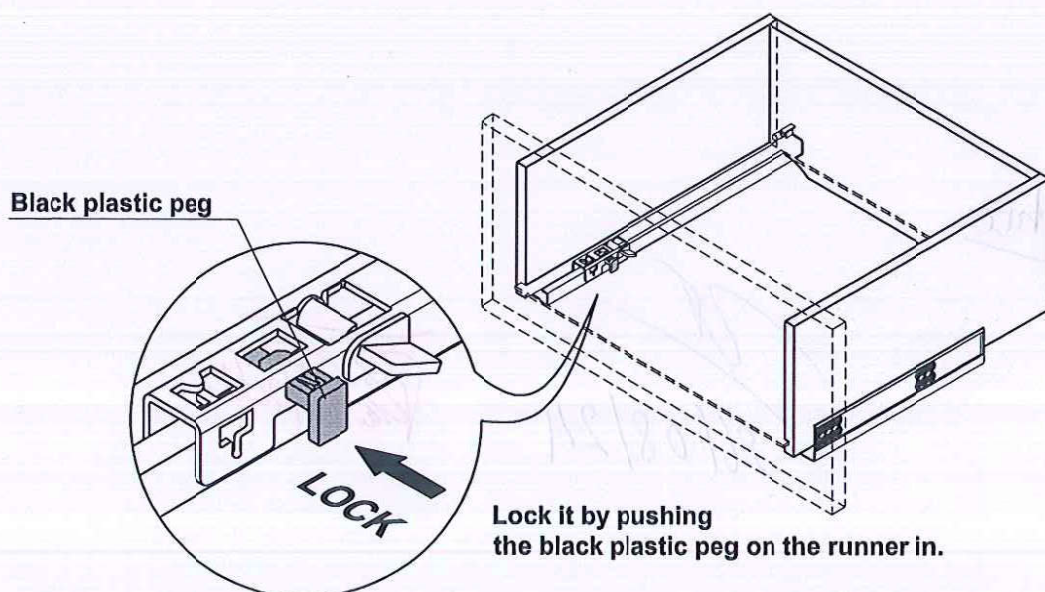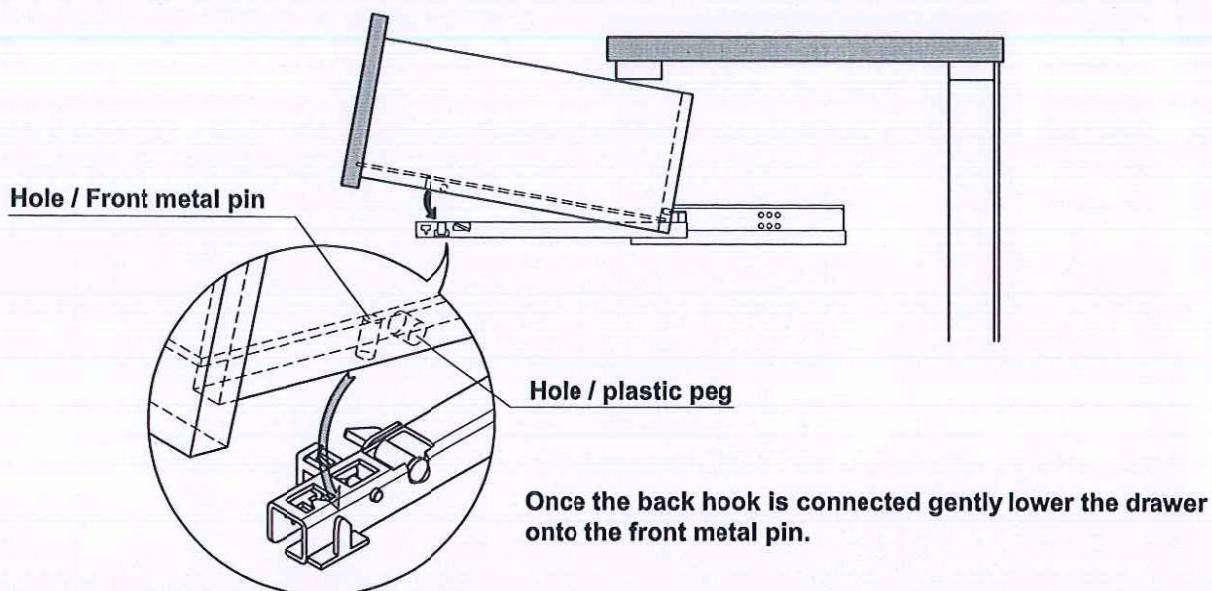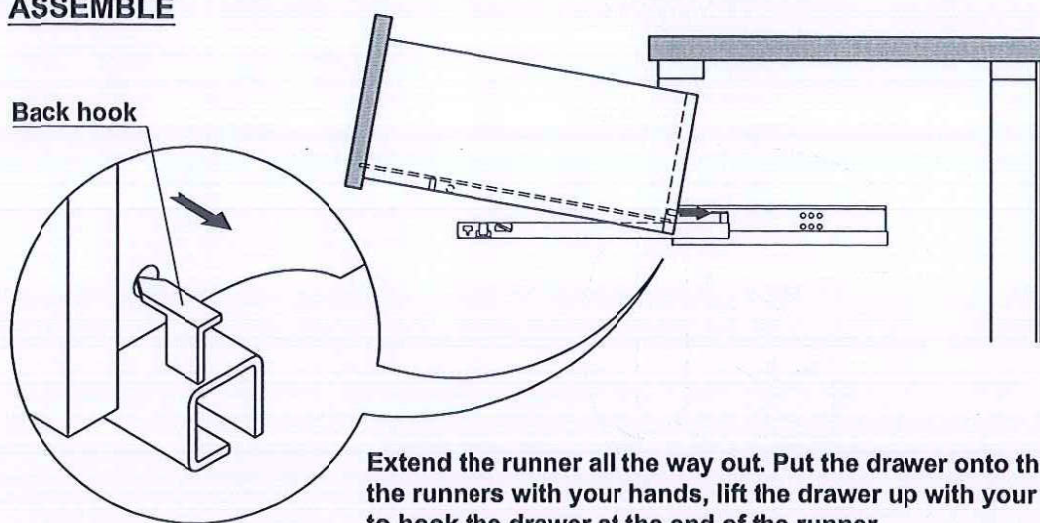


TAYLOR RUNNER ADJUSTMENT INSTRUCTION

 Assembly 2

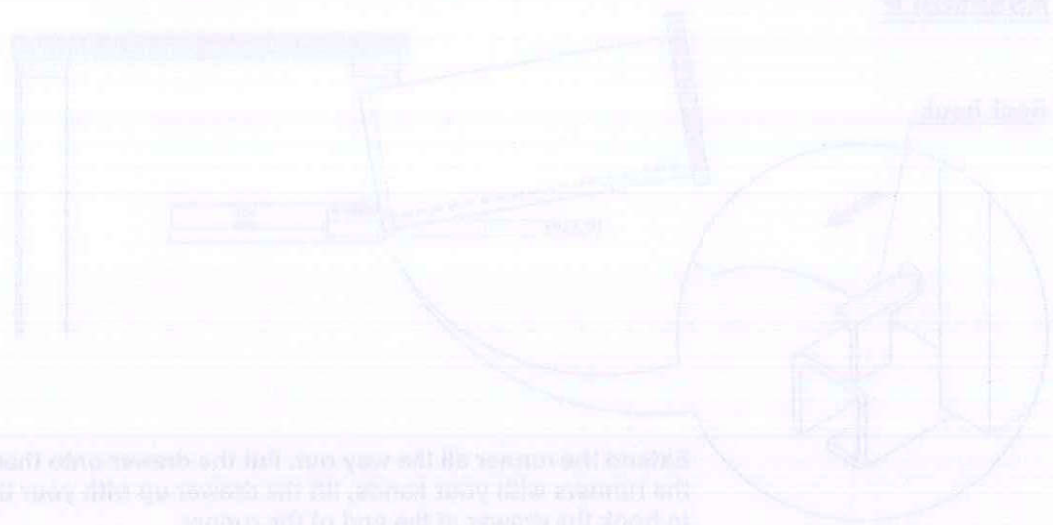

 Extend the runner all the way out, lift the drawer into the front panel and push the runner into the front panel. The runner will pop up with your thumb and push to hook the drawer at the end of the runner.

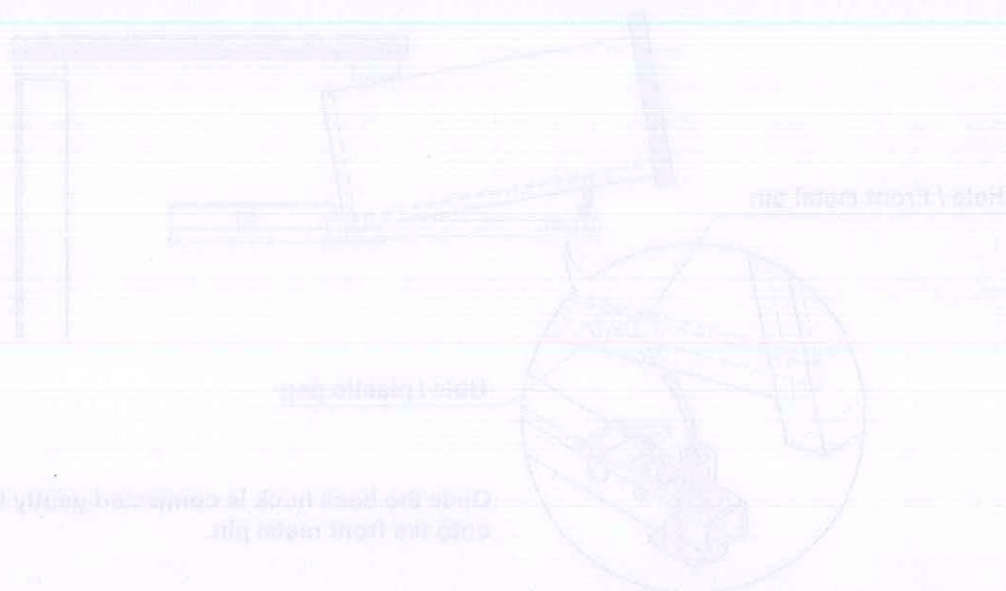

Once the front panel is completely flush, push the drawer into the front panel.

update

Am
86.08.24

26/08/24

26/08/24