 


WIDE SIDEBOARD

Stock number: 2807-15

 
Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

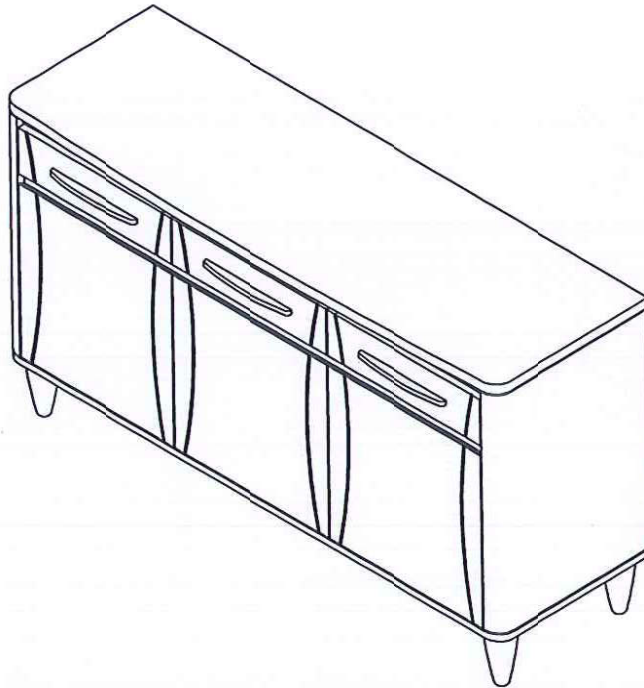

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools : Phillips screwdriver



Ph 2



Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

 
This product takes approximately **30 MINUTES** to assemble with **2 PERSON**.

All assembly should be performed on a flat, stable, clean and soft surface.

This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product.

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

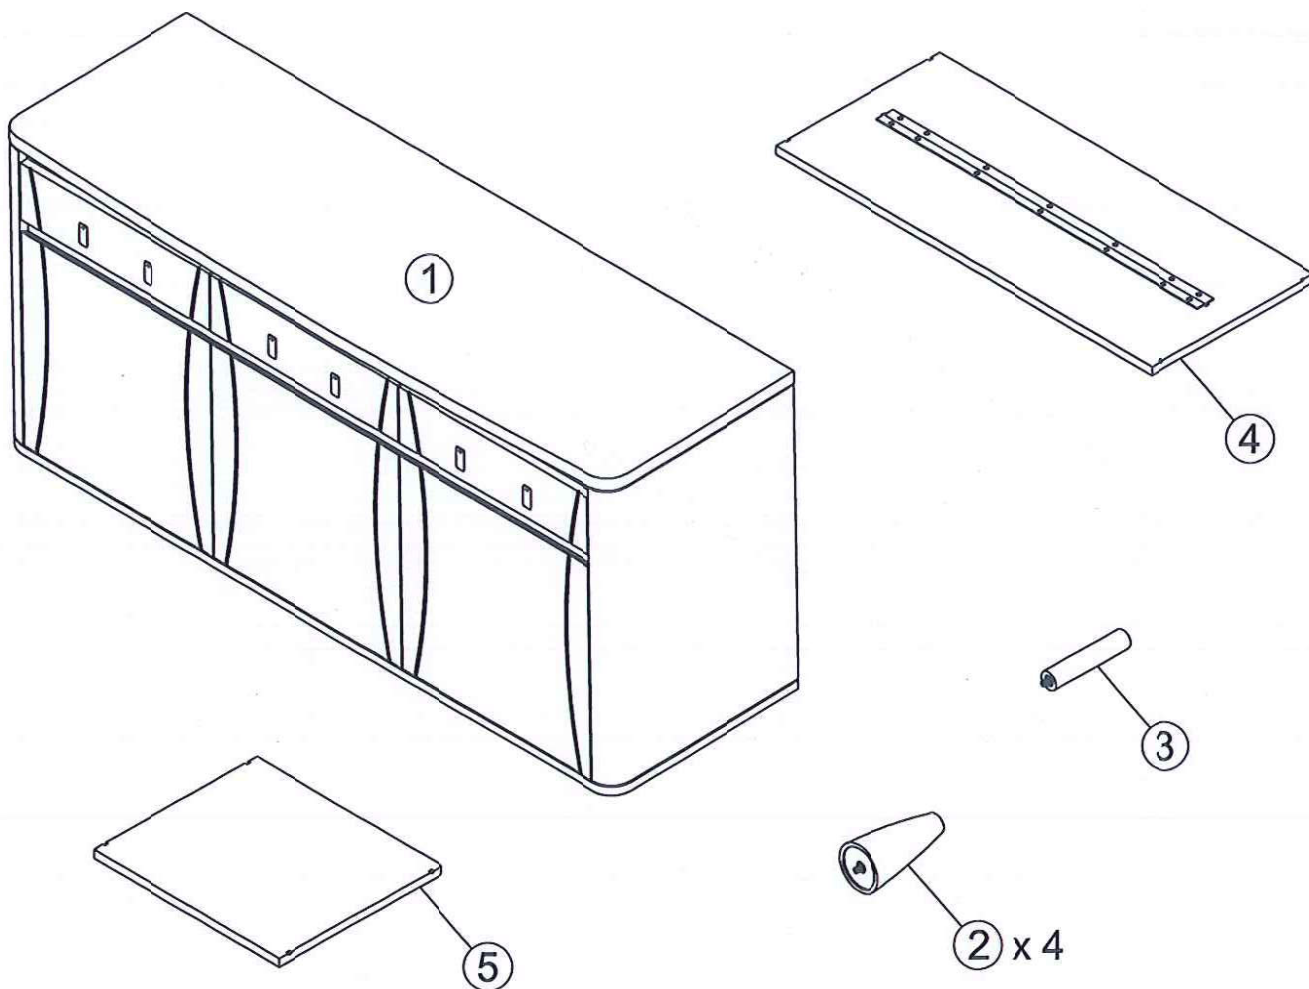

Fittings and parts checklist

Item	Description	Qty.	Item	Description	Qty.
1	Top Unit	x 1	4	Adjust Table Shelf A	x 1
2	Leg	x 4	5	Adjust Table Shelf B	x 1
3	Center Leg	x 1			
A	Shelf pin 	x 8			

Step by step assembly instructions

 
Step 1

1.1 : Lay all parts on a flat, stable, clean and soft surface.

1.2 : Screw each leg (2) and center leg (3) into the mounting plate on the unit (1) as shown. Continue to re-tighten until it is securely fastened.

Repeat above procedure for the remaining legs (2).

1.3 : Stand the unit upright.

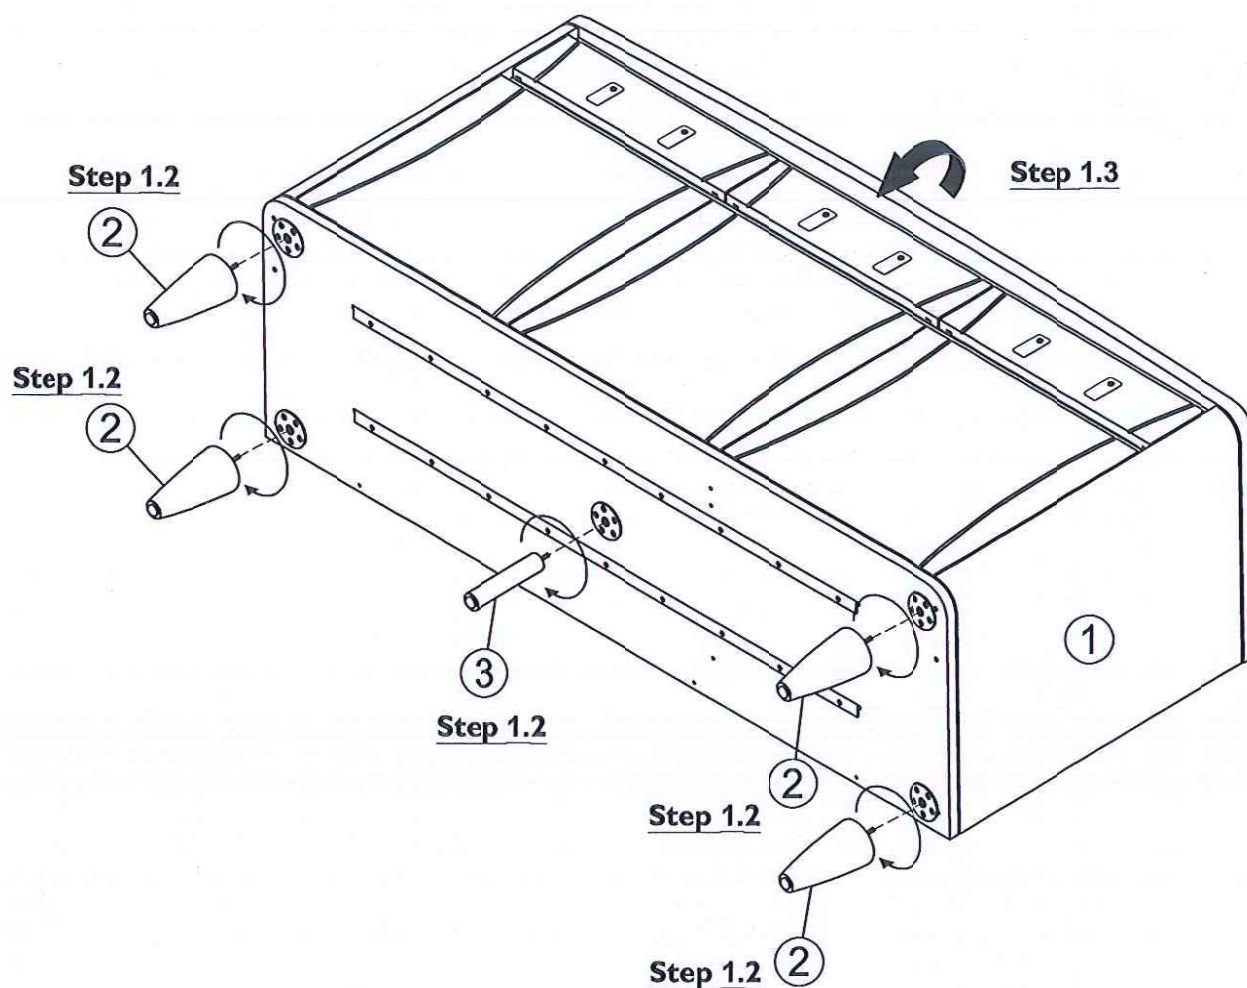


Step by step assembly instructions

- Step 2**
- 2.1 : Screw 2x shelf pins (A) into the insert fittings in partition of the unit (1) as shown.
 - 2.2 : Tilt adjustable shelf A (4) to a suitable angle as shown in the picture so as to slide them in.
 - 2.3 : Slide adjustable shelf A (4) into the unit. Ensure the notches on adjustable shelf A (4) is facing down, then lower the right side of adjustable shelf A (4) onto the pins of shelf pins (A) as shown.

Fitting



 A x 2

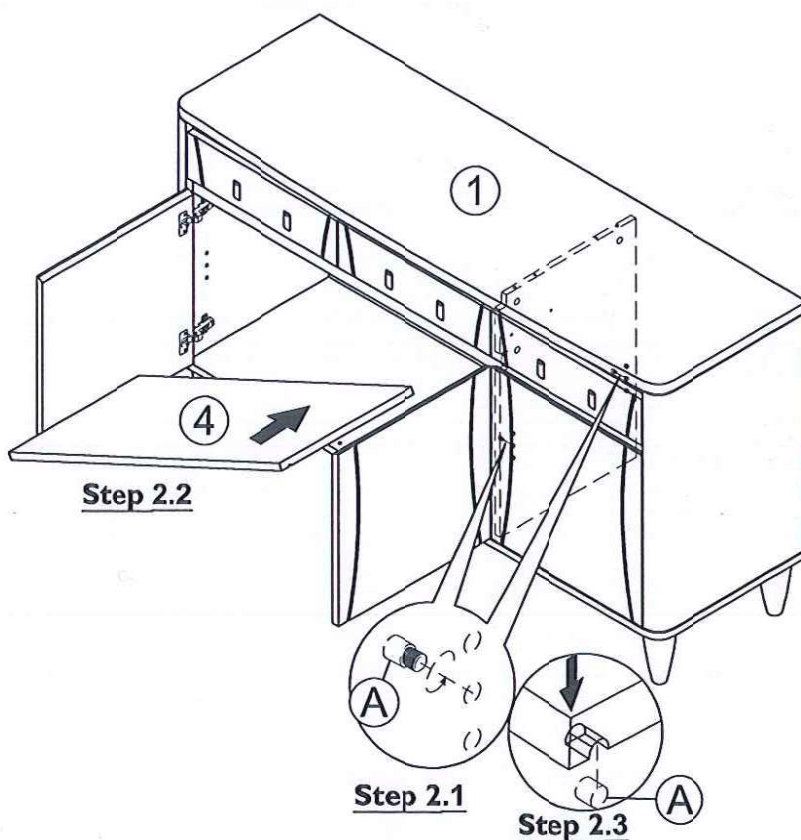


- Step 3**
- 3.1 : Lift up left side of adjustable shelf A (4).
 - 3.2 : Screw 2x shelf pins (A) into the insert fittings in partition of the unit as shown.
 - 3.3 : Lower adjustable shelf (4) onto the pins of shelf pins (A) as shown.

Fitting



 A x 2

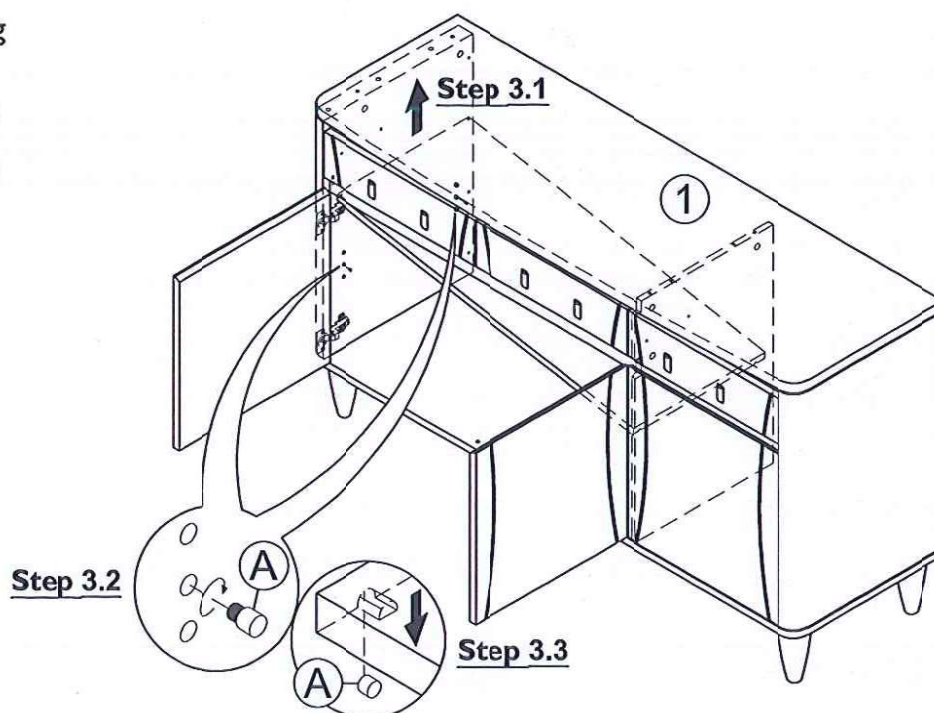


Step by step assembly instructions

- Step 4**
- 4.1 : Screw 2x shelf pins (A) into the insert fittings in right side panel of the unit (1) as shown.
 - 4.2 : Tilt adjustable shelf B (5) to a suitable angle as shown in the picture so as to slide them in.
 - 4.3 : Slide adjustable shelf B (5) into the unit. Ensure the notches on adjustable shelf B (5) is facing down, then lower the right side of adjustable shelf B (5) onto the pins of shelf pins (A) as shown.

Fitting



 A x 2

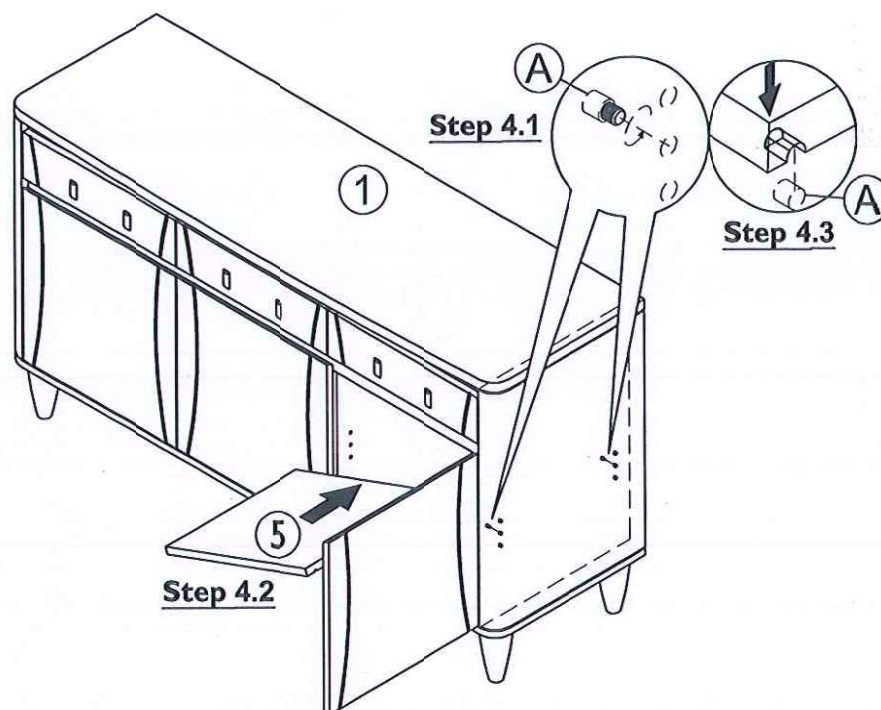


- Step 5**
- 5.1 : Lift up left side of adjustable shelf B (5).
 - 5.2 : Screw 2x shelf pins (A) into the insert fittings in partition of the unit as shown.
 - 5.3 : Lower adjustable shelf B (5) onto the pins of shelf pins (A) as shown.

Fitting



 A x 2

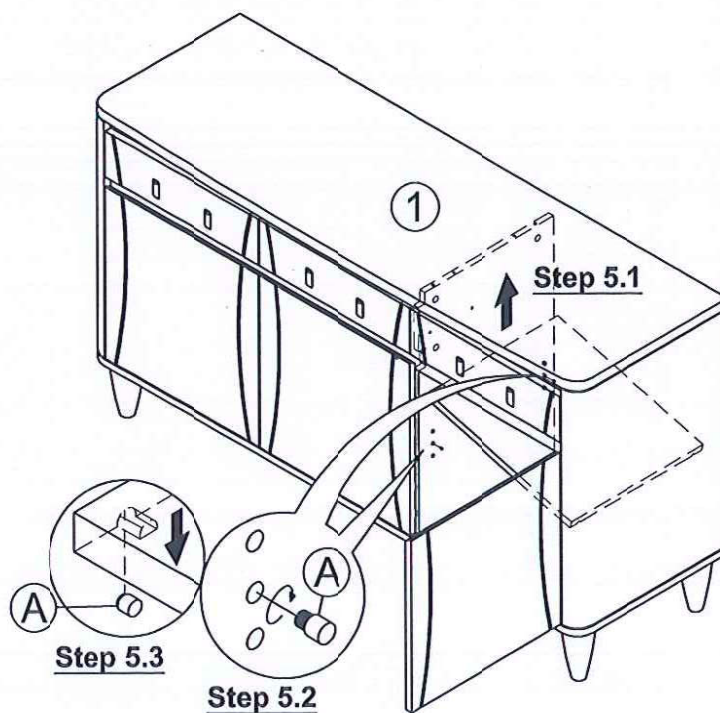


Step by step assembly instructions


Step ⑥

- 6.1 : Pull out the drawer as shown.
- 6.2 : Remove the handles from drawer fronts by using a screwdriver to turn round head bolts counterclockwise as shown.
- 6.3 : Attach a handles to drawer fronts using round head bolts as shown. Use a screwdriver to turn fittings clockwise to fix.

 Step 6.1 & 6.2

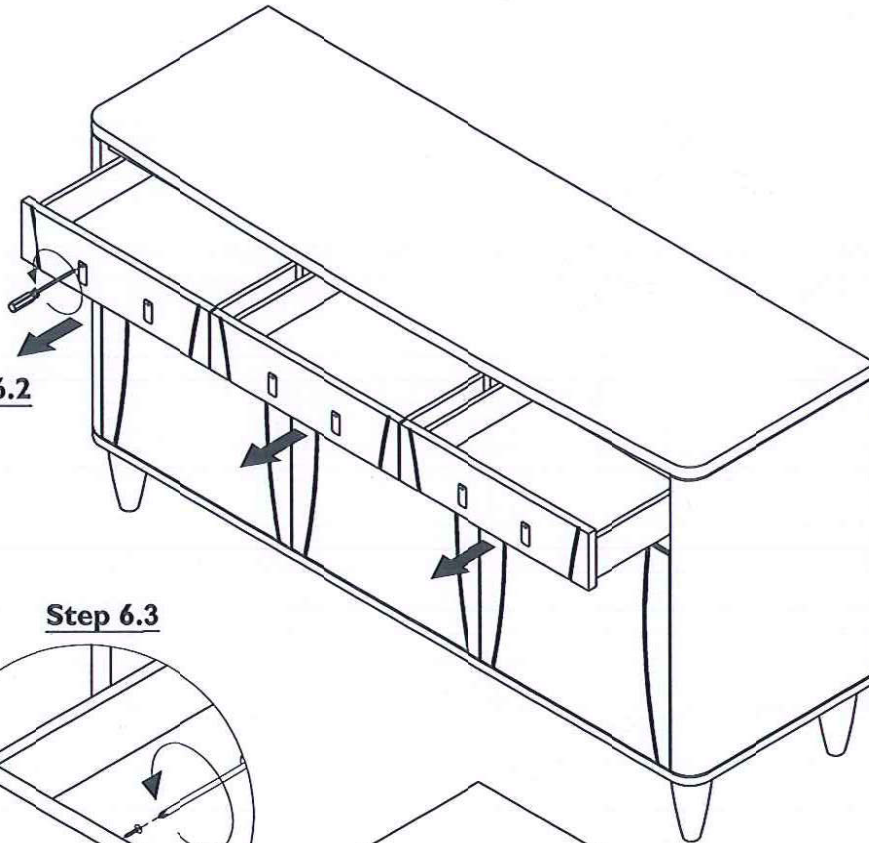

 Step 6.3

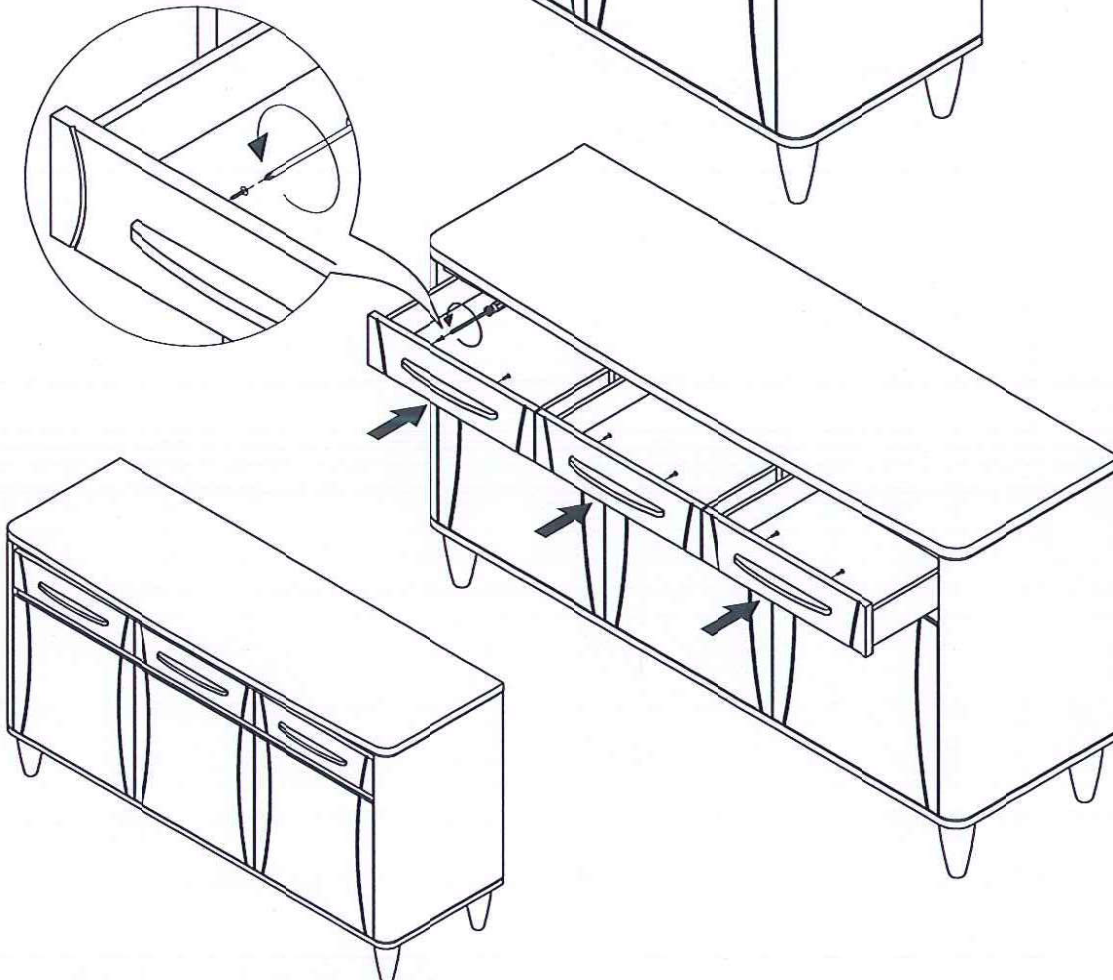


Assembly is complete

HINGE ADJUSTMENT INSTRUCTIONS


LATERAL ADJUSTMENT

 by screw adjustment.

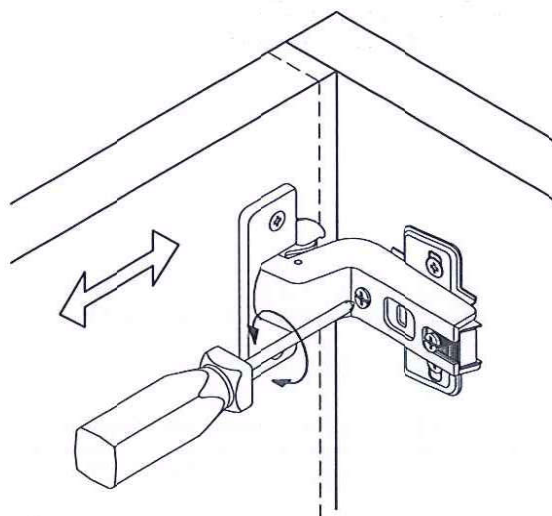


FRONT-TO-BACK

 by slackening and retightening
the hinge-arm mounting screw.

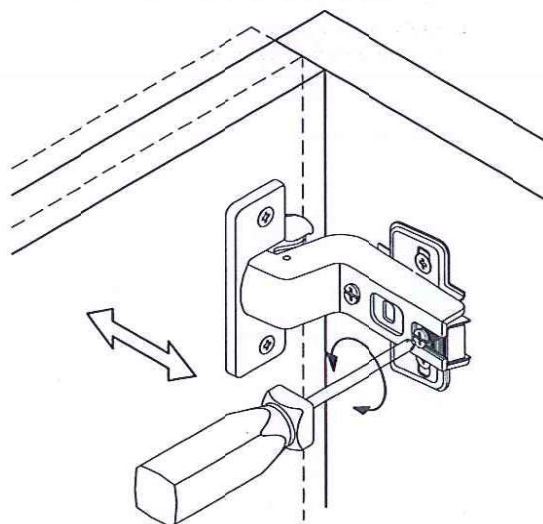

VERTICAL ADJUSTMENT

 
via slots on mounting
plate by slackening and
retightening the screws
on mounting plate

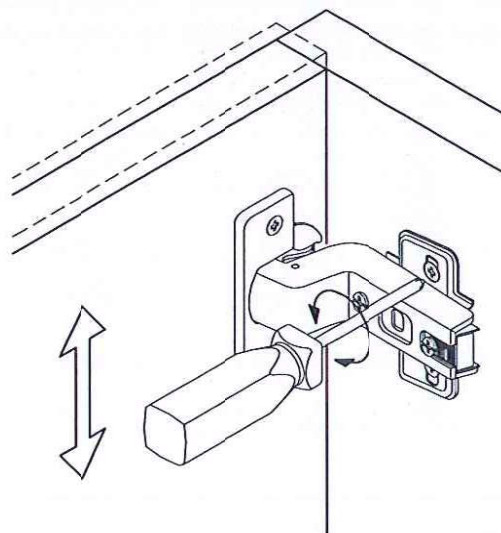

HINGE ADJUSTMENT INSTRUCTIONS


LATERAL ADJUSTMENT

 by screw adjustment.

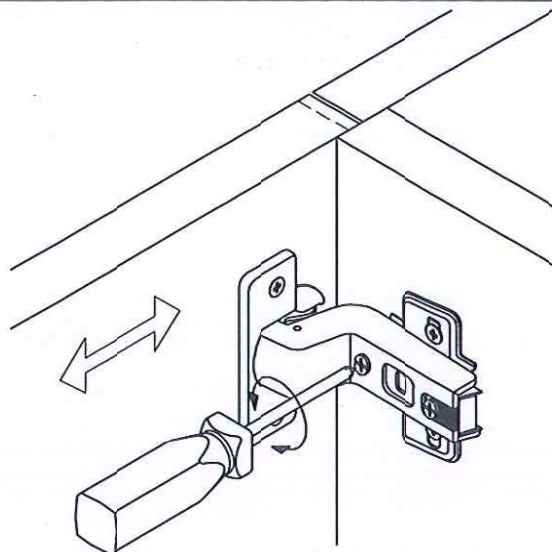


FRONT-TO-BACK

 by slackening and retightening
the hinge-arm mounting screw.

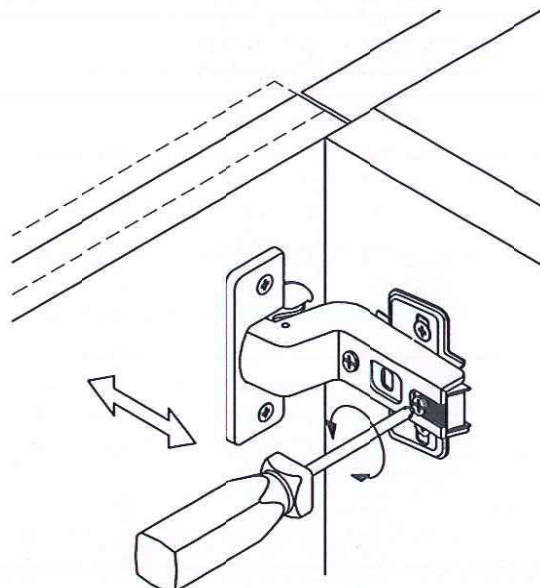


VERTICAL ADJUSTMENT

 via slots on mounting
plate by slackening and
retightening the screws
on mounting plate

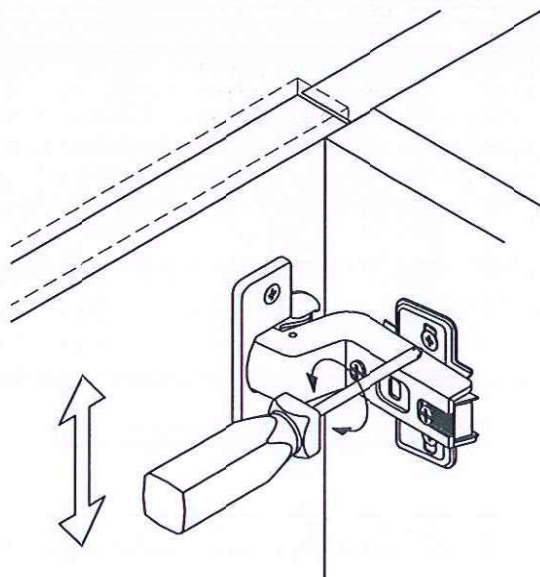


TANDEM RUNNER ADJUSTMENT INSTRUCTION

 REMOVE

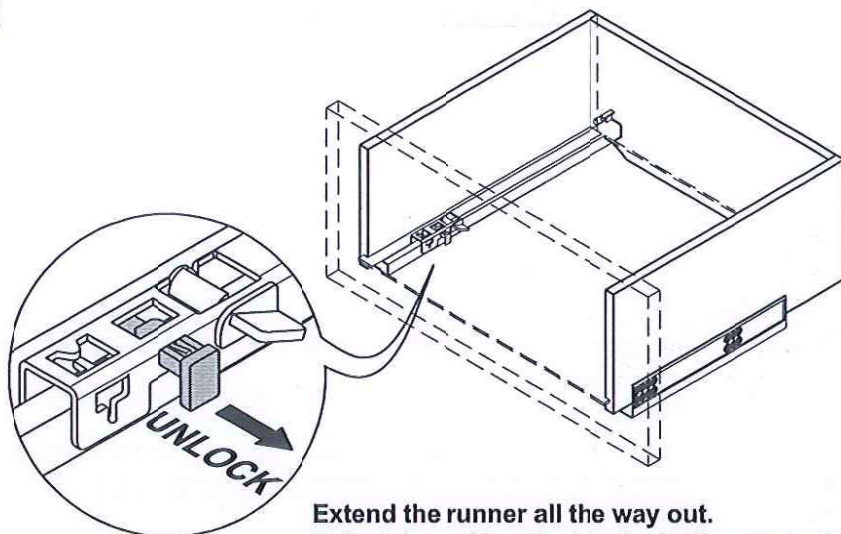


 Extend the runner all the way out.
Unlock by pulling the black plastic peg on the runner out.

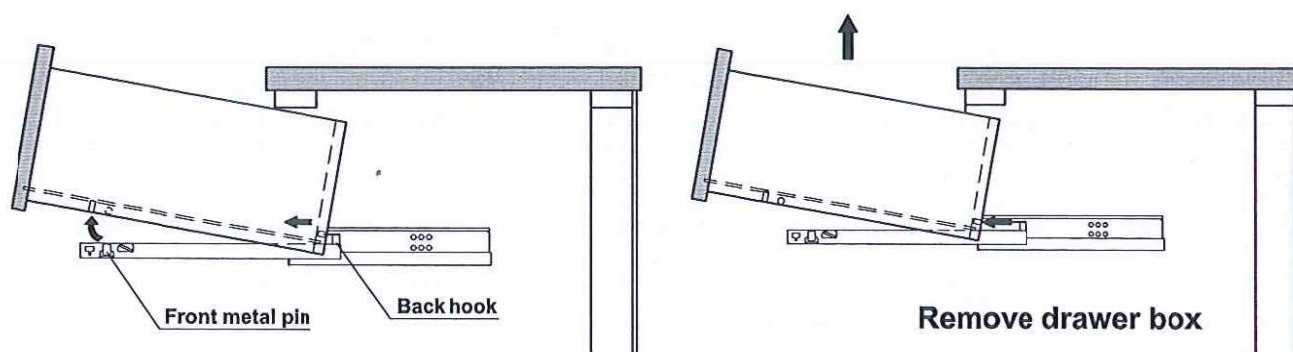




Hold runners with both of your hands.
Carefully lift the drawer front up from the front metal pin, then slide forward to remove from back hooks.

 VERTICAL ADJUSTMENT (± 2.5 mm)

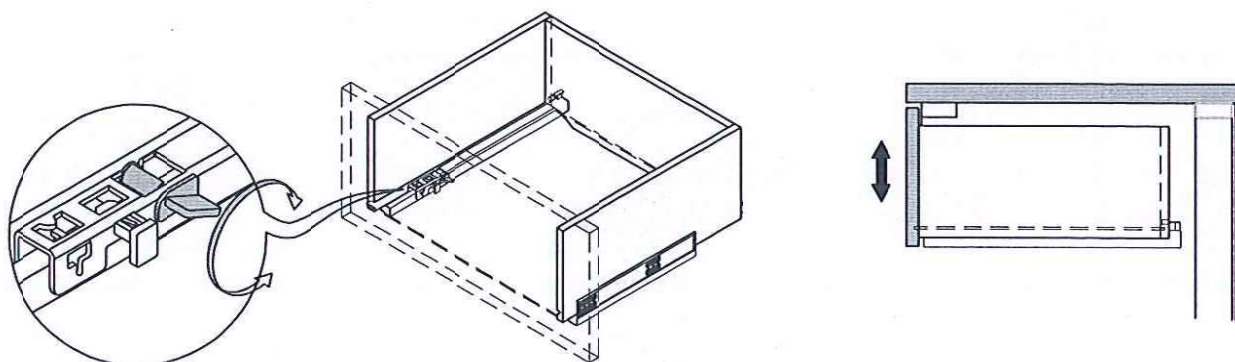


TANDEM RUNNER ADJUSTMENT INSTRUCTION

   ASSEMBLE

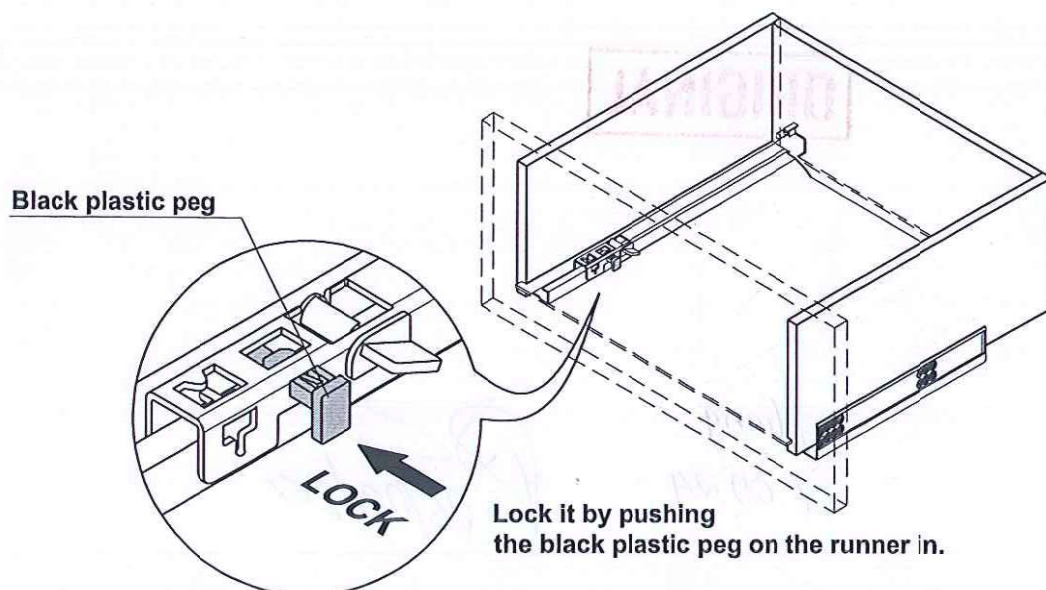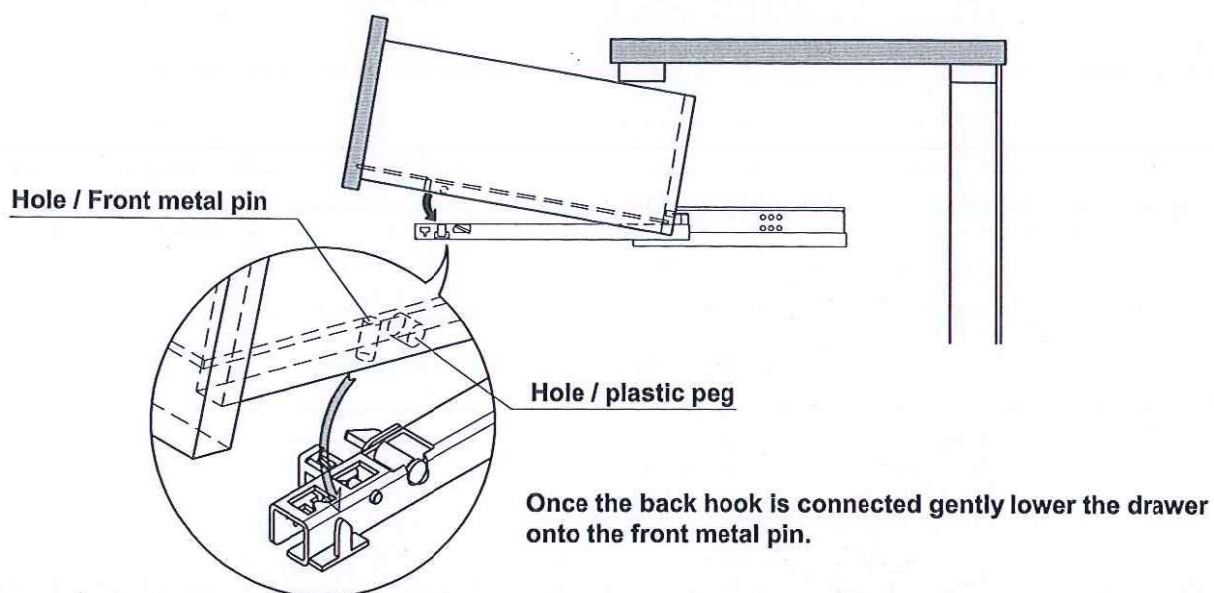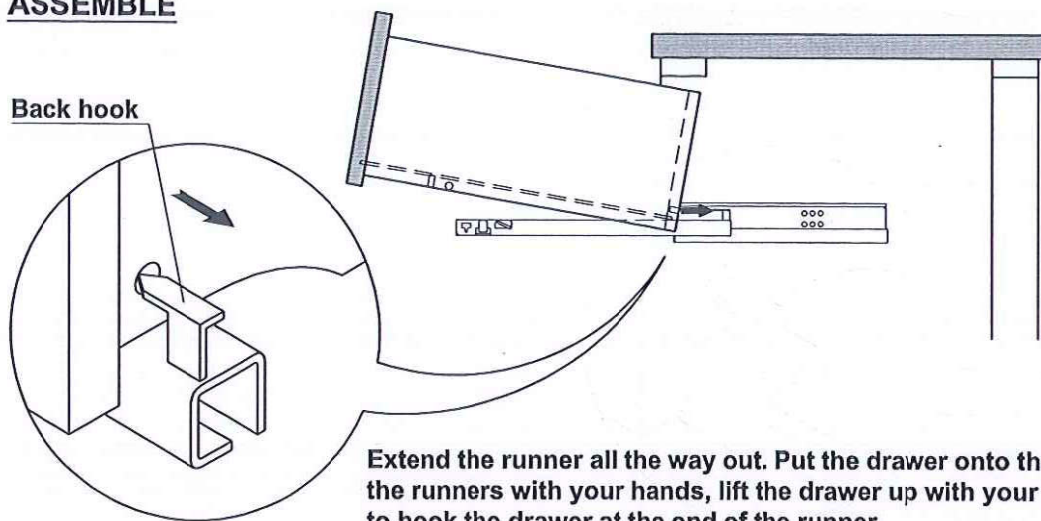


TANDEM RUMBER ADJUSTMENT INSTRUCTIONS

 FIGURE 1

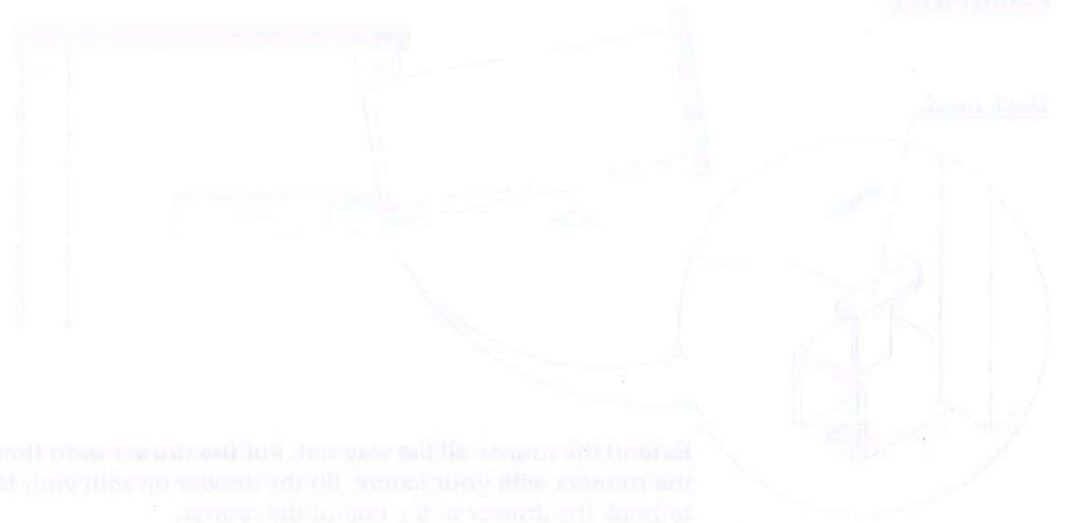

 Adjust the rumber to the size of the rumber, but the rumber into the rumber. The rumber with your rumber, the rumber up with your rumber and push to push the rumber to a rumber of the rumber.

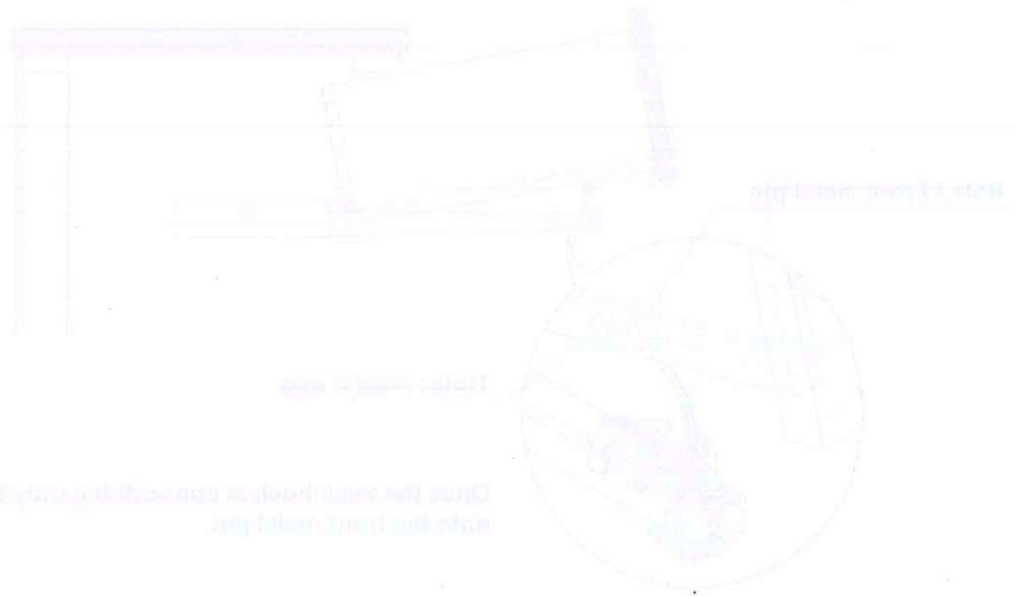

Since the rumber is connected to the rumber, the rumber is connected to the rumber.

ORIGINAL



06/09/24

Humg
06.09.24


06/09/24