STANDARD TIP KIT INSTRUCTIONS

FITTINGS AND PARTS CHECKLIST


Item	Description			ltem	Description	Qty.	
aa	Mounting plate		× 2	CC	Flat head screw Ø4 x 17mm		x 2
bb	Nylon strap		x 1		manuse (not also report to the constant of an about the constant of a second of the constant of a second of an		

Notice: Important warning

Notice: To prevent injury and property damage from unexpected tipping of furniture, we highly recommend installation of the anti-tip kit included with this product.

Attaching furniture to wall with anti-tip kits

- 1. Determine where the piece is to be placed and mark location on the wall for the mounting bracket screw holes. They should be placed approximately 1" below the top on the back of the piece of furniture.
- 2. Drill the hole and use the appropriate wall plug that is suitable for your walls composition. **Warning:** Before drilling check wall for hidden pipes and cables.
- 3. Attach the mounting bracket horizontally to the wall using appropriate fastener, through the holes in the bracket and 2 wall plugs that are suitable to your wall and then tighten securely.
- 4. Next using the short screws attach the 2nd bracket to the back of the piece of furniture's top.
- 5. Lace the nylon strap down through the brackets. Slide the thin end of the strap through the receiving end on the nylon strap. Pull to tighten the piece of furniture snug against wall.

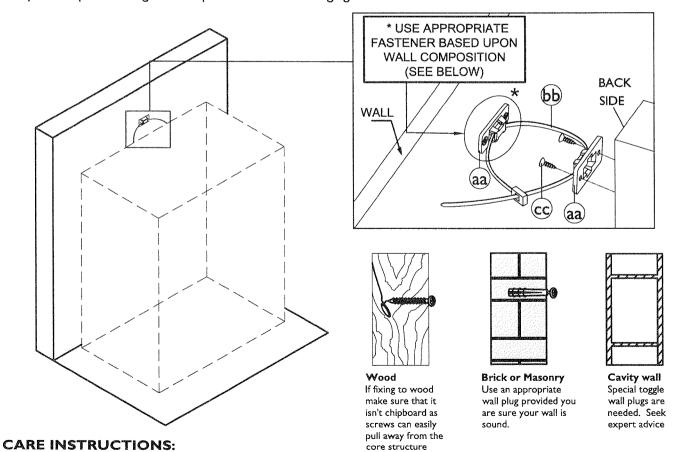

- 1. Hardware may loosen overtime. Periodically check that all connections are tight and re-tighten as necessary.
- 2. Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.