


6 SEATER DINING TABLE

Stock number: 401X-(2,4)M



Thank you for purchasing this product. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

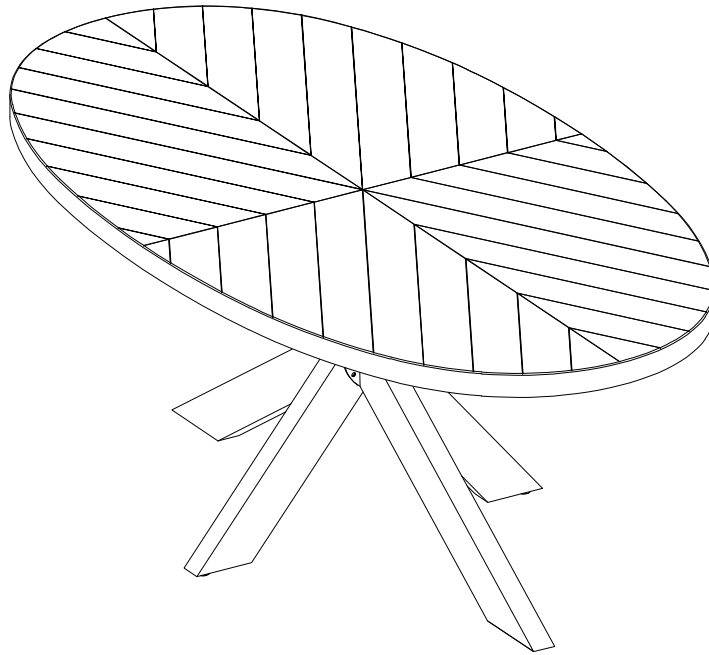

Pre-assembly preparation

Please ensure instructions are read in full before attempting to assemble this product.

Necessary Tools :

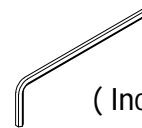

(Included)

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.


This product takes approximately **20 MINUTES** to assemble with **2 PEOPLE**.

All assembly should be performed on a flat, stable, clean and soft surface.



This product is **HEAVY**, it should be assembled as near as possible to the point of use. **TAKE CARE WHEN LIFTING** to avoid personal injury and (or) damage to the product

The fitting pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.

IMPORTANT: Retain these instructions for future reference.

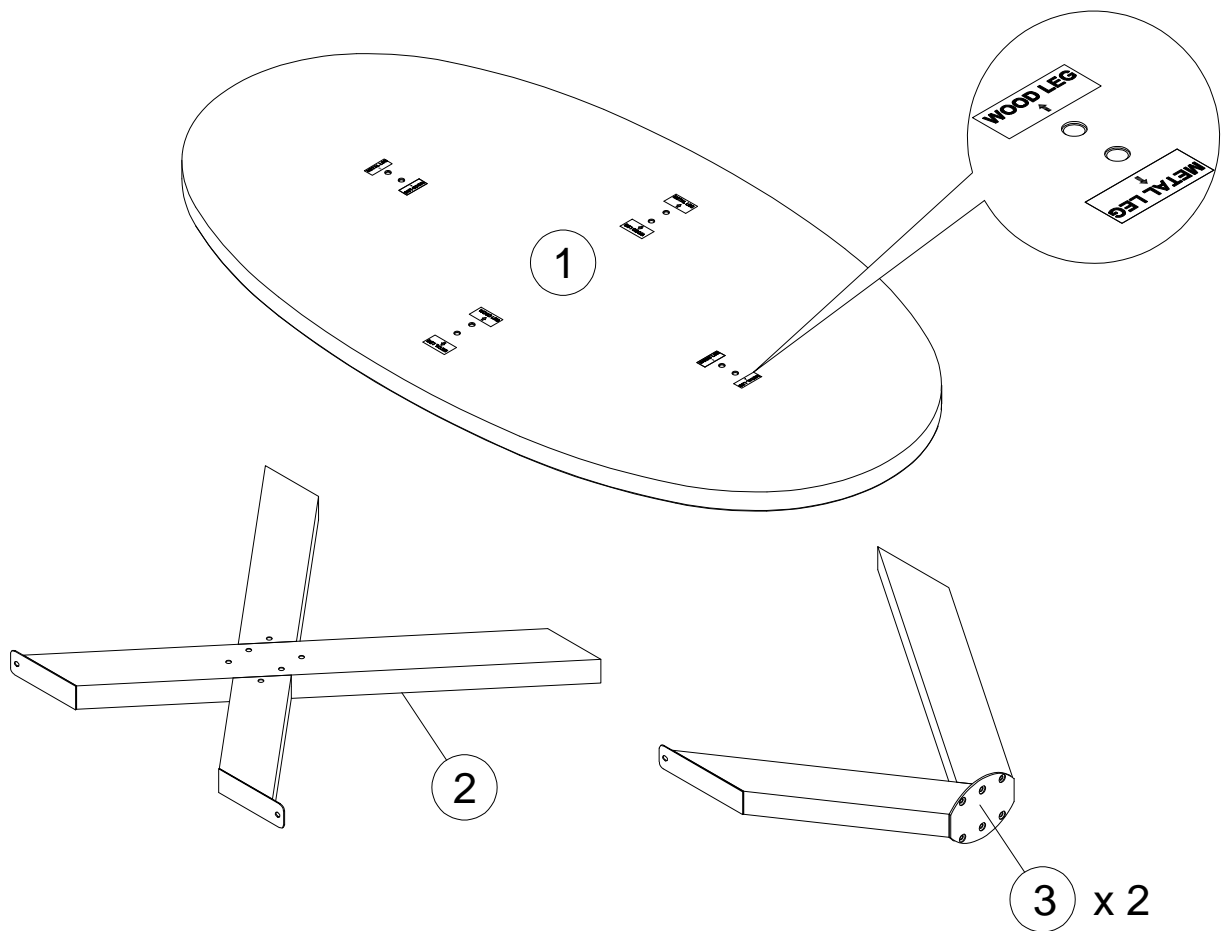

Fittings and parts checklist
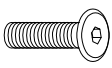
| Item | Description | Qty. | | Item | Description | Qty. |
|----------|--------------------------|------|---|----------|---|------|
| 1 | Table top | x 1 | | 3 | Metal Leg B | x 2 |
| 2 | Metal Leg A | x 1 | | | | |
| A | Hex head bolt M8x20mm | x 16 |  | B | Allen key M4x30x110mm | x 1 |
| | | | | |  | |

Step By Step Assembly Instructions

- Step 1**
- 1.1 : Lay all parts on a flat, stable, clean and soft surface.
- 1.2 : Attach metal legs B (3) onto metal leg A (2) using 12x hex head bolts (A) as shown. Ensure the pre-drilled holes on metal legs B (3) are aligned correctly to the holes on metal leg A (2). Use an allen key (B) to turn fittings (A) clockwise to fix. Do not fully tighten.


Fitting



A x 12




B x 1

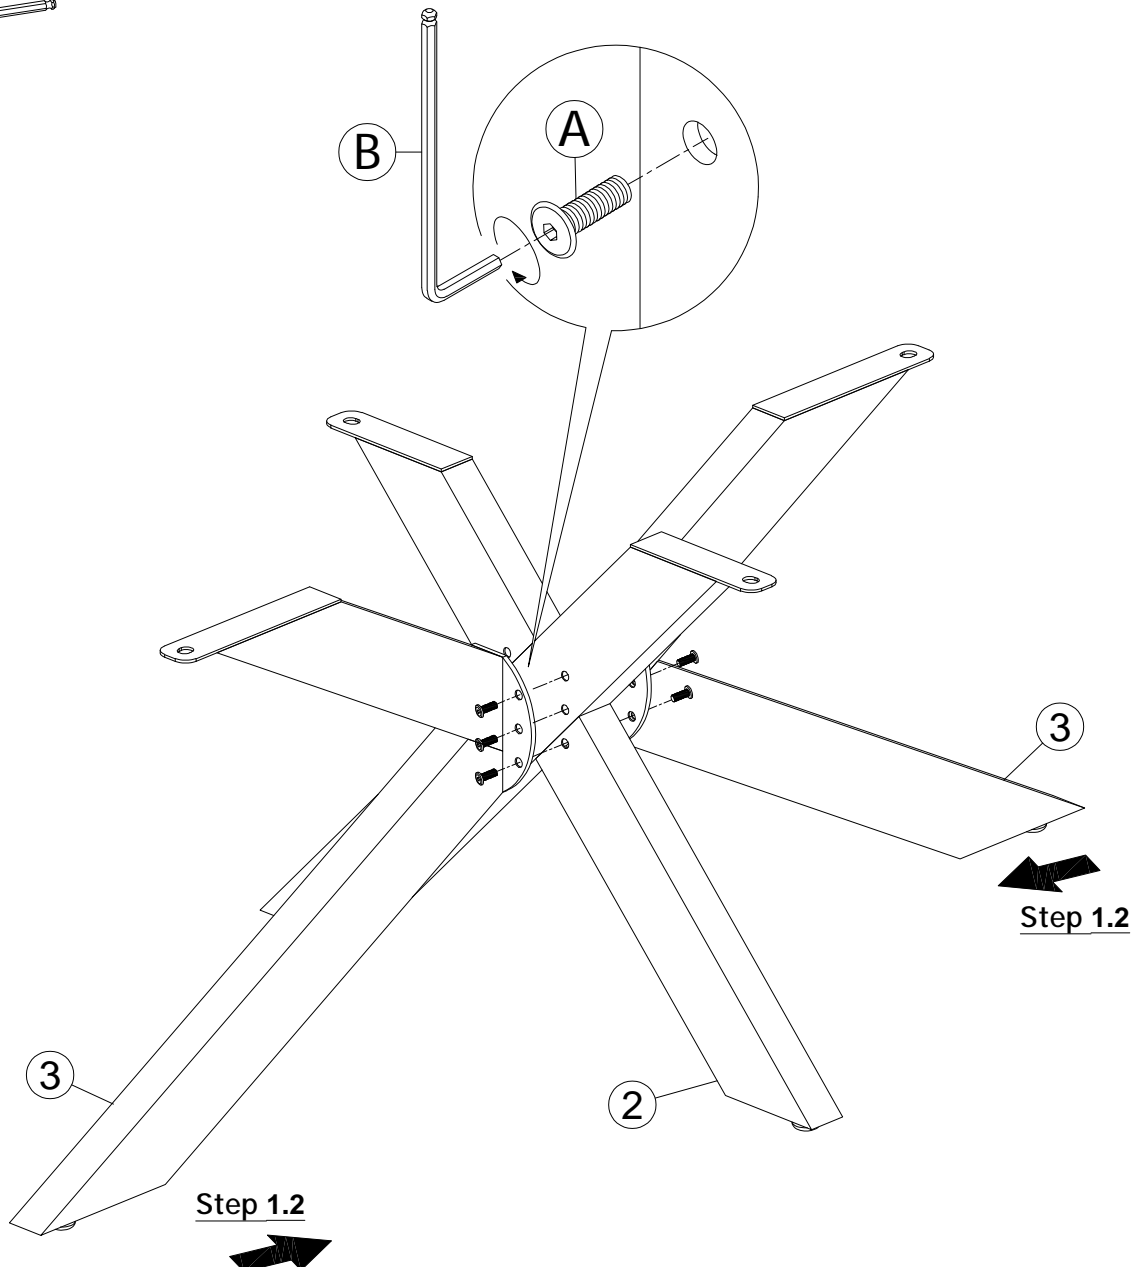

Step By Step Assembly Instructions

- Step 2** 2.1 : Attach the structure assembled in Step 1 onto underside of table top (1) as shown. Ensure the pre-drilled holes on metal leg A (2) and metal legs B (3) are aligned correctly to the holes on table top (1) before attaching.
- 2.2 : Secure metal leg A (2) and metal legs B (3) to the holes with the "METAL LEG" label on table top (1) using 4x hex head bolts (A) as shown. Use an allen key (B) to turn fittings (A) clockwise to fix.
- Note:** Position all bolts (A) on all metal legs before full tightening.
- 2.3 : Re-tightening.
- 2.4 : Stand the unit upright.



A x 4



B x 1

